



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	46	32901A 2	WATER PUMP ASSEMBLY, COM	1,1,1,1		
1	46	32899A 1	BEARING HOUSING ASSEMBLY	1,1,1,1		
2	17	33166	PIN, DOWEL - BEARING HOU	1,1,1,1		
3	26	33215	OIL SEAL, BEARING HOUSIN	2,2,2,2		
4	30	33451	BEARING, BALL - BEARING H	1,1,1,1		
5	53	33452	RING, SNAP - BALL BEARING	1,1,1,1		
6	19	33165	WELCH PLUG, BEARING HOL	1,1,1,1		
7	27	33176	GASKET, BEARING HOUSING	1,1,1,1		
8		32837	PLATE, FACE - BEARING HOUS	1,1,1,1		
9	27	33175	GASKET, REAR BODY TO FACE	1,1,1,1		
10	47	30221	IMPELLER, REAR BODY	1,1,1,1		
11	17	29967	PIN, IMPELLER DRIVE - REAR	1,1,1,1		
12	46	32900A 1	WATER PUMP BODY ASSEMBL	1,1,1,1		
13		30915	INSERT, REAR BODY	1,1,1,1		
14	17	33166	PIN, DOWEL - REAR BODY	1,1,1,1		
15	27	33174	GASKET, REAR BODY TO FRONT	1,1,1,1		
16	46	32901A 1	WATER PUMP BODY ASSEMBL	1,1,1,1		
17		30915	INSERT, FRONT BODY	1,1,1,1		
18	47	30221	IMPELLER, FRONT BODY	1,1,1,1		
19	17	29967	PIN, IMPELLER DRIVE - FRONT	1,1,1,1		
20	45	35878	SHAFT, WATER PUMP	1,1,1,1		
21	28	30250	KEY, WATER PUMP PULLEY DI	1,1,1,1		
22	27	33175	GASKET, FRONT BODY TO FAC	1,1,1,1		
23		32836	PLATE, FACE - BEARING HOUS	1,1,1,1		
24	27	33176	GASKET, BEARING HOUSING T	1,1,1,1		
25	46	32896A 1	BEARING HOUSING ASSEMBLY	1,1,1,1		
26	17	33166	PIN, DOWEL - BEARING HOU	1,1,1,1		
27	26	33215	OIL SEAL, BEARING HOUSIN	2,2,2,2		
28	30	33451	BEARING, BALL - BEARING H	1,1,1,1		
29	53	33452	RING, SNAP - BALL BEARING	1,1,1,1		
30	23	33477	SPACER, WATER PUMP PULLE	1,1,1,1		
31		35938	PULLEY, WATER PUMP	1,1,1,1		
32	12	20959	WASHER, WATER PUMP SHAF	1,1,1,1		
33	11	20220	NUT, WATER PUMP SHAFT	1,1,1,1		
34	10	33160	SCREW, OUTLET HOUSING TC	3,3,3,3		
35	11	29250	NUT, BEARING HOUSING SCRI	3,3,3,3		
-	27	35758A 1	GASKET SET, WATER PUMP	1,1,1,1		
36		32895	BRACE, WATER PUMP MOUNTIN	1,1,1,1		
37	10	24217	SCREW, BRACE TO FRONT MOU	1,1,1,1		
38	12	20553	WASHER, WATER PUMP BRACE	AR,AR,		
39	11	26369	NUT, WATER PUMP BRACE SCR	1,1,1,1		