



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		46839	DISTRIBUTOR ASSEMBLY, COM	1		
2		33708	CAP, DISTRIBUTOR	1		
3		33654	BUTTON, CARBON - DISTRIB	1		
4		33707	ROTOR, DISTRIBUTOR	1		
5	10	33692	SCREW, ROTOR TO BREAKER	2		
6	13	26996	LOCKWASHER, ROTOR TO BR	2		
7	24	52281	SPRING, BREAKER CAM ADVA	2		
8		33698	WEIGHT, BREAKER CAM ADVA	2		
9		52282	SHAFT, MAIN - BREAKER CAM	1		
10	23	34116	SLEEVE, MAIN SHAFT	1		
11		38810	CAM, BREAKER - ADVANCE	1		
12		33706	CONDENSER	1		
13	393	2730	BRACKET, CONDENSER MOUN	1		
14	10	33722	SCREW, CONDENSER AND BR	1		
15		33653	FELT WICK, CAM WIPER - MOU	1		
16		33713	RETAINER, FELT WICK - MOU	1		
17		33714	PLATE, MOUNTING - BREAKER	1		
18		33705	LEAD, GROUND - MOUNTING	1		
19	24	33710	SPRING, RETAINING - MOUNTI	1		
20		33700	BREAKER ASSEMBLY	1		
21	10	33718	SCREW, BREAKER ASSEMBLY	2		
22	12	34112	WASHER, FELT - MOUNTING P	1		
23		4649	HOUSING, PRIMARY - DISTRIB	1		
24	26	34111	SEAL, DISTRIBUTOR HOUSIN	1		
25	25	33709	GROMMET, DISTRIBUTOR HI	1		
26		33695	VACUUM CONTROL, DISTRIBU	1		
27	10	33648	SCREW, VACUUM CONTROL T	2		
28	13	33691	LOCKWASHER, VACUUM CONI	2		
29		33712	LEAD WIRE, PRIMARY - DISTR	1		
30	12	46350	WASHER, TANG - MAIN SHAFT	1		
31	12	33696	WASHER, MAIN SHAFT	1		
32	43	33725	GEAR DRIVE - MAIN SHAFT	1		
33	17	34109	PIN, DRIVE GEAR TO MAIN SH	1		
34	27	52184	GASKET, DISTRIBUTOR	1		
35		52185	CLAMP, DISTRIBUTOR	1		
36	10	54528	SCREW, DISTRIBUTOR TO INTA	1		
37		34089A	LEAD ASSEMBLY, DISTRIBUTOR	1		
38		26433	COIL ASSEMBLY, IGNITION	1		
39		34106	BRACKET, IGNITION COIL MOUN	1		
40	10	33231	SCREW, COIL ATTACHING (3/4")	2		
41	12	26992	LOCKWASHER, COIL SCREW	2		