



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53652A	HOUSING ASSEMBLY, FLYWHEEL	1		
2		35852	MOUNT RUBBER - FLYWHEEL	2		
3		35864	COVER PLATE, FLYWHEEL HOU:	1		
4	10	25299	SCREW, COVER PLATE TO FLYW	6		
5	13	39107	LOCKWASHER, COVER PLATE S	6		
6	10	34354	SCREW, FLYWHEEL HOUSING T	4		
6	10	53734	SCREW, FLYWHEEL HOUSING T	2		
7	13	37459	LOCKWASHER, FLYWHEEL HOU	6		
8	54	46997	CLAMP, WIRING HARNESS TO H	1		
9	10	22245	SCREW, WIRING HARNESS CLAI	1		
10	13	26996	LOCKWASHER, WIRING HARNE	1		
11		22789	"D" WASHER, WIRING HARNE	1		
12		39974	CONNECTOR, HARNESS LEADS	2		
13	10	47618	SCREW, CONNECTOR TO FLYWI	2		
14	38	31042	SERIALK PLATE	1		
15	10	20314	SCREW, DRIVE-SERIAL PLATE T	2		