
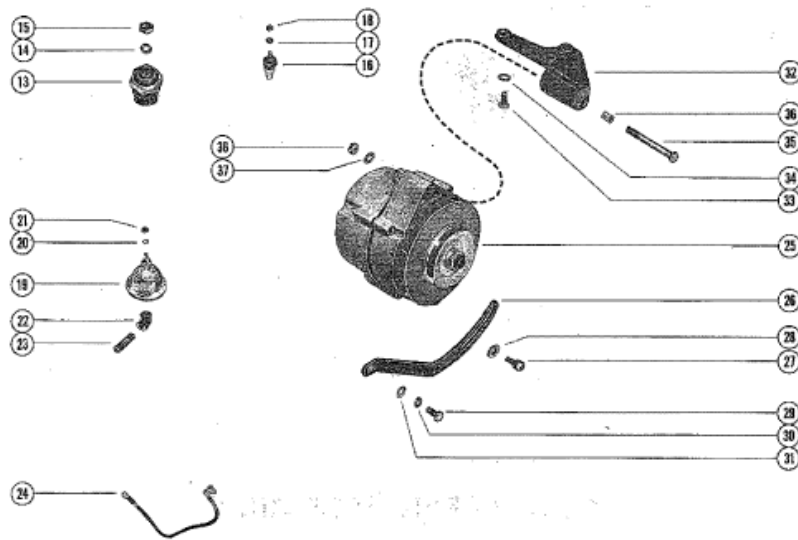


**INBOARD**

**STERN DRIVE**

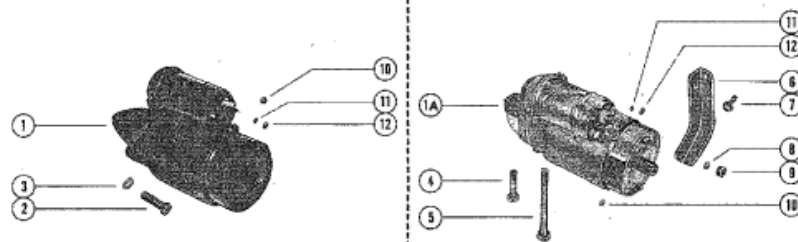

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	47455	STARTER MOTOR ASSY (STAN	1	SEE NOTE BELOW-INBOARD	
1	50	47454	STARTER MOTOR ASSY (OPPOS	1	SEE NOTE BELOW-INBOARD	
2	10	47462	SCREW, STARTER MOTOR TO C	2	INBOARD	
3	13	32993	LOCKWASHER, STARTER MOTO	2	INBOARD	
1A	50	46277	STARTER MOTOR ASSEMBLY (S	1	STERN DRIVE	
4	10	34544	BOLT, STARTER MOTOR TO CYL	1	STERN DRIVE	
5	10	34545	BOLT, STARTER MOTOR TO CYL	1	STERN DRIVE	
6		35363	BRACE, STARTER MOTOR	1	STERN DRIVE	
7	10	35765	SCREW, BRACE TO CYLINDER B	1	STERN DRIVE	
8	13	35367	LOCKWASHER, BRACE TO STAR	1	STERN DRIVE	
9	11	20890	NUT, BRACE TO STARTER MOT	1	STERN DRIVE	
10	11	28517	NUT, STARTER TERMINAL (3/8"	1		
11	13	26395	LOCKWASHER, STARTER TERM	2		
12	11	26419	NUT, STARTER TERMINAL (#8)	2		
13		34625	WATER TEMPERATURE SENDEL	1		
13		36525	WATER TEMPERATURE SENDEL	1		
14	13	26396	LOCKWASHER, WATER TEMPEF	1		
15	11	20645	NUT, WATER TEMPERATURE SE	1		
16		52676	SWITCH, ELECTRIC CHOKE	1		
17	13	26396	LOCKWASHER, CHOKE SWITCH	1		
18	11	20645	NUT, CHOKE SWITCH TERMINAL	1		
19		34623	OIL PRESSURE SENDER ASSEM	1		
20	13	26396	LOCKWASHER, OIL PRESSURE S	1		
21	11	20645	NUT, OIL PRESSURE SENDER T	1		
22	22	46932	ELBOW, OIL PRESSURE SENDEF	1		
23	22	38992	NIPPLE, OIL PRESSURE SENDEF	1		
24		45107	BATTERY CABLE (NEGATIVE) ST	1		
24		45108	BATTERY CABLE (POSITIVE)	1		
25		47456A	ALTERNATOR ASSEMBLY (SEE I	1		
26		47498	BRACE, ALTERNATOR ADJUSTIN	1		
27	10	29198	SCREW, ALTERNATOR BRACE T	1		
28	12	26168	WASHER, ALTERNATOR BRACE	1		
29	10	27165	SCREW, ALTERNATOR BRACE T	1		
30	13	35048	LOCKWASHER, ALTERNATOR BI	1		
31	12	20553	WASHER, ALTERNATOR BRACE	1		
32		47620	BRACKET, ALTERNATOR MOUN	1	SERIAL 02278647-02399397	
31		48104	BRAAKET, ALTERNATOR MOUN	1	SERIAL 02399398-09999999	
33	10	21077	SCREW, ALTERNATOR BRACKE	3		
34	13	35048	LOCKWASHER, ALTERNATOR BI	3		
35	10	48329	SCREW, ALTERNATOR TO ALTE	1		
36	22	22185	PUSHING, ALTERNATOR BRACK	1		