



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		61815	BRACKET, MOUNTING (FRONT)	2		
2	10	30155	SCREW, ENGINE LOCATING (1 1/2")	2		
3	11	22024	NUT, ENGINE LOCATING SCREW	2		
4	16	65737	STUD, MTG. BRKT. TO CYL. BLO	3	SEE NOTE	
4	16	65743	STUD, MTG. BRKT. TO CYL. BLO	1	SEE NOTE	
5	12	34567	WASHER, MOUNTING BRACKET	2		
6	12	54426	WASHER, MOUNTING BRACKET	4		
7	11	34933	NUT, MOUNTING BRACKET TO C	4		
8	10	47654	SCREW, CLAMP - ADJUSTING TF	2		
9	13	32993	LOCKWASHER, CLAMP ADJUSTI	2		
10	54	47528	CLAMP, ADJUSTING TRUNNION	4		
11	11	29553	NUT, CLAMP ADJUSTING TRUNN	2		
12		60421A 5	BRACKET ASSEMBLY, MOUNTIN	2		
13		52753	MOUNT MOUNTING BRACKET	4		
14	12	48611	WASHER, MOUNTING BRACKET	4		
15	10	52156	SCREW, ADJUSTING TRUNNION	2		
16	14	48467	TAB WASHER, ADJUSTING TRUI	2		
17	11	47525	NUT, JAM - ADJUSTING TRUNNII	2		
18	17	22116	PIN, ROLL - JAM NUT	2		
19		47518	TRUNNION, ADJUSTING - MOUN	2		