



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		62767A 7	TRANSMISSION ASSEMBLY, COM	1	SEE NOTE	
67		62687	BAND, CLUTCH	1		
68		62723	LINK, CLUTCH BAND	1		
69		62666	STRUT, CLUTCH BAND ANCHC	1		
70	10	62679	SCREW, ADJUSTING - CLUTCH	1		
71	12	62781	WASHER, SEALING - ADJUSTIP	1		
72	11	21612	NUT, JAM - ADJUSTING SCREW	1		
73		62694A 3	PLANETARY AND CLUTCH DRI	1		
74	30	62699	BALL BEARING, PLANETARY	1		
75	31	62675A 1	BEARING ASSEMBLY, THRUST	2		
		62736A 1	SHAFT ASSEMBLY, INPUT	1		
77			KEY, INPUT SHAFT	1		1
78	22	39072	PLUG, PIPE - OUTPUT SHAFT	1		
79		62754	SHAFT, OUTPUT	1		
80			RING SEAL, OUTPUT SHAFT	4		2
81			SNAP RING, CLUTCH HUB TO	2		1
82		62693	HUB, CLUTCH	1		
83		62691A 1	CLUTCH PLATE KIT	1		
84			SNAP RING, CLUTCH PACK KIT	1		1
85		62686	RING, PRESSURE - CLUTCH SPF	1		
86			SEAL, PISTON - OUTER	1		2
87		62667	PISTON, CLUTCH	1		
88			"O" RING, PISTON - INNER	1		2
89		62685A 1	HOUSING ASSEMBLY, PISTON	1		
90	30	62697	BALL BEARING, PISTON HOU	1		
91			SNAP RING, PISTON HOUSING	1		1
92			SNAP RING, BALL BEARING TC	2		1
93	30	62698	BALL BEARING, OUTPUT SHAF	1		
94		62739A 2	HOUSING ASSEMBLY, OUTPUT	1		
95			SEAL, OUTPUT HOUSING	1		2
96			BALL, OUTPUT HOUSING (3/	1		1
97	16	32027	STUD, RETAINER TO OUTPUT	6		
98	30	62780	BALL BEARING, OUTPUT HO	1		
99			"O" RING, OUTPUT HSG./TRAI	1		2
100			"O" RING, OIL PASSAGE - OUTI	1		2
101	10	53016	SCREW, OUTPUT HOUSING TC	6		
102	13	39107	LOCKWASHER, OUTPUT HOU	6		
103		62734	MOUNT, RUBBER - OUTPUT HI	1		
104		62733	RETAINER, BALL BEARING	1		
105	12	62684	WASHER, THRUST - OUTPUT I	1		
106			"O" RING, OUTPUT HOUSING	1		2