


**INBOARD**

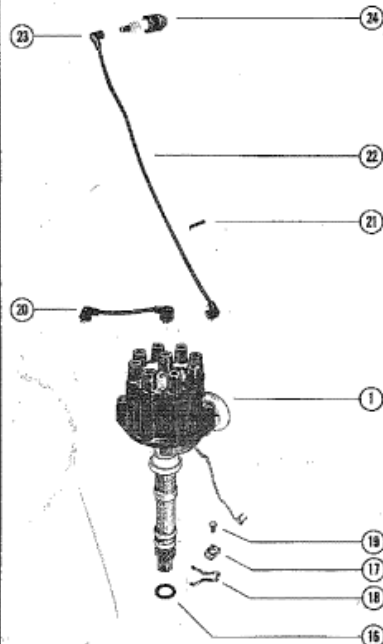

					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		47493A 2	DISTRIBUTOR ASSEMBLY, COM	1			
2	393	3230	CAP, DISTRIBUTOR	1			
3		49924	ROTOR, DISTRIBUTOR	1			
4		48789A 1	HOUSING ASSEMBLY, ADAPTC	1			
5	17	20032	PIN, DOWEL - ADAPTOR HOL	2			
6	54	48575	CLAMP, CAP TO ADAPTOR HOL	2			
7	10	37572	SCREW, DISTRIBUTOR CLAMP	2			
8	13	26996	LOCKWASHER, DISTRIBUTOR	2			
9	393	2918A 5	TRIGGER ASSEMBLY	1			
10	10	47618	SCREW, TRIGGER ATTACHING	4			
11	13	26996	LOCKWASHER, TRIGGER ATT	4			
12	10	26595	SCREW, ADAPTOR HOUSING F	4			
13	13	26995	LOCKWASHER, ADAPTOR HOL	4			
14	43	47619	GEAR, DISTRIBUTOR	1			
15	17	47617	ROLL PIN, GEAR TO DISTRIBUT	1			
16	27	34891	GASKET, DISTRIBUTOR	1			
17		35369	CLAMP UNIT, DISTRIBUTOR TO	1			
18		34549	RETAINER, DISTRIBUTOR CLA	1			
19	10	21077	SCREW, DISTRIBUTOR CLAMP A	1			
20		47862A 1	LEAD ASSEMBLY, DISTRIBUTOR	1			
21		32782	RETAINER, HIGH TENSION LEAC	1			
21		32783	RETAINER, HIGH TENSION LEAC	2			
21		32754	RETAINER, HIGH TENSION LEAC	2			
22		47861A 1	LEAD ASSEMBLY, HIGH TENSIO	1			
22		47861A 3	LEAD ASSEMBLY, HIGH TENSIO	2			
22		47861A 4	LEAD ASSEMBLY, HIGH TENSIO	1			
22		47861A 5	LEAD ASSEMBLY, HIGH TENSIO	1			
22		47861A 6	LEAD ASSEMBLY, HIGH TENSIO	1			
22		47861A 7	LEAD ASSEMBLY, HIGH TENSIO	2			
23		47604A 1	PROTECTOR, SPARK PLUG	8			
24	33	48372	SPARK PLUG, (AC V-40)	8			