



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		46354A	1 HOUSING ASSEMBLY, FLYWHEEL	1		
2		35852	MOUNT, FLYWHEEL HOUSING	2		
3	10	28464	SCREW, FLYWHEEL HOUSING T	3		
3	10	20359	SCREW, FLYWHEEL HOUSING T	2		
3	10	37612	SCREW, FLYWHEEL HOUSING T	1		
3	10	32132	SCREW, FLYWHEEL HOUSING T	1		
4	13	37459	LOCKWASHER, FLYWHEEL HOU	7		
5		39974	CONNECTOR, HARNESS LEADS	2		
6	10	45210	SCREW, CONNECTOR TO FLYWI	2		
7	11	24656	NUT, CONNECTOR SCREW	2		
8		32888	BRACKET, REAR SUPPORT	1		
9	12	34726	WASHER, REAR SUPPORT BRA	4		
10	13	33164	LOCKWASHER, REAR SUPPORT	2		
11	11	20739	NUT, JAM-REAR SUPPORT BRAC	4		
12		32889	PLATE, BEARING-REAR SUPPOF	2		
13		32890	PLATE, BEARING-REAR SUPPOF	2		
14	10	33158	SCREW, BEARING PLATE TO RE	4		
15	12	20553	WASHER, BEARING PLATE SCRE	8		
16	11	25269	NUT, BEARING PLATE TO REAR	4		
17	16	33172	STUD, ADJUSTING-REAR SUPPI	2		
18	12	33869	WASHER, REAR SUPPORT BRA	2		
19	12	32638	WASHER, RUBBER-REAR SUPPI	4		
20	12	33182	WASHER, REAR SUPPORT BRA	2		
21	12	33171	WASHER, REAR SUPPORT BRA	2		
22	11	22339	NUT, REAR SUPPORT BRACKET	2		
23	38	31042	SERIAL PLATE, CYLINDER BLOC	1		
24	10	20314	SCREW, DRIVE-SERIAL PLATE T	2		