

FLYWHEEL HOUSING AND OIL COOLER (INBOARD)

Parts List

┙							
1		Parts List					
ı	Ref	Class		Description	Qty	Comment	Footnote
ı	1_		47553	HOUSING, FLYWHEEL	1		
ı	2	23	47511	SLEEVE, CONNECTING - FLYWHI	2		
ı	3	22	32802	PLUG, DRAIN - FLYWHEEL HOUS	1		
ı	4		47542	COVER, FLYWHEEL HOUSING	1		
ı	5	10	28635	SCREW, COVER TO FLYWHEEL I	4		
ı	6	13	26992	LOCKWASHER, COVER SCREW	4		
ı	7	38	47520	SERIAL PLATE	1		
ı	8	10	20314	SCREW, SERIAL PLATE ATTACHI	4		
ı	9	10	26632	SCREW, FLYWHEEL HOUSING T	3		
ı	10	10	45363	SCREW, FLYWHEEL HOUSING T	2		
ı	11	12	33181	WASHER, SEALING - FLYWHEEL	2		
ı	12		47610	COOLER, OIL	1		
ı	13		47490	COVER, OIL COOLER	1		
ı	14	27	47495	GASKET, OIL COOLER COVER	1		
ı	15	25	47632	"O" RING, SEALING - OIL COOLEI	2		
ı	16	11	47521	NUT, JAM - OIL COOLER	2		
I	17	22	47917	ELECTRODE, OIL COOLER	1		
ı	18	10	20362	SCREW, OIL COOLER COVER TO	6		
ı	19	12	36533	WASHER, OIL COOLER COVER S	2		
1	19	13	26421	LOCKWASHER, OIL COOLER COV	4		
1							
1							
Ш							