



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47805	TRANSMISSION (DIRECT DIRVE)	1,...		
1		47806	TRANSMISSION (1.523:1 REDUCI	,1,...		
1		47807	TRANSMISSION (1.909:1 REDUC	,,1,...		
1		47808	TRANSMISSION (2.57:1 REDUCT	,,,1,		
1		47809	TRANSMISSION 2.909:1 REDUCT	,,,,1		
2	10	47724	SCREW, TRANSMISSION TO ENI	4,...		
2	10	47724	SCREW, TRANSMISSION TO ENI	,6,6,6,E		
3	16	45199	STUD, TRANSMISSION TO ENGI	2,...		
4	13	32993	LOCKWASHER, TRANSMISSION	6,6,6,6,		
5	11	22024	NUT, TRANSMISSION STUD	2,...		
6	22	47629	ELBOW, HOSE TO TRANSMISSIC	1,1,1,1,		
7	32	47516 1	HOSE, OIL COOLER TO TRANSM	1,...		
7	32	47516 3	HOSE, OIL COOLER TO TRANSM	,1,1,1,1		
8	22	47630	ELBOW, HOSE TO OIL COOLER (1,1,1,1,		
9		47613	SWITCH, NEUTRAL SAFETY	1,1,1,1,		
10		48381	FLANGE (1")	OPT.,0		
10		48382	FLANGE (1 1/8")	OPT.,0		
10		48383	FLANGE (1 1/4")	OPT.,0		
10		48384	FLANGE (1 3/8")	OPT.,0		
10		48385	FLANGE (1 1/2")	OPT.,0		
11		47500	BRACKET, SHIFT CABLE	1,...	NOT AS SHOWN	
11		47514	BRACKET, SHIFT CABLE	,1,1,1,1	NOT AS SHOWN	
12	12	22937	WASHER, SHIFT CABLE TO BRAI	1,1,1,1,		
13	11	20586	NUT, SHIFT CABLE TO BRACKET	1,1,1,1,		
14	22	47629	ELBOW, HOSE TO TRANSMISSIC	1,...		
15	23	36159	BUSHING, REDUCING - TRANSM	,1,1,1,1		
16	022	47631	ELBOW, HOSE TO TRANSMISSIC	,1,1,1,1		
17	32	47516 4	HOSE, TRANSMISSION TO OIL C	1,...		
17	32	47516 2	HOSE, TRANSMISSION TO OIL C	,1,1,1,1		
18	22	47630	ELBOW, HOSE TO OIL COOLER (1,1,1,1,		
19		47517	LEVER, SHIFT - TRANSMISSION	1,1,1,1,		
20	12	20722	WASHER, SHIFT LEVER TO TRA	1,1,1,1,		
21	13	26993	LOCKWASHER, SHIFT LEVER TC	1,1,1,1,		
22	11	20083	NUT, SHIFT LEVER TO TRANSMI	1,1,1,1,		
23		47548	ADAPTOR, SHIFT CABEL TO SHI	,1,1,1,1		
24	13	29402	WAVE WASHER, SHIFT CABLE A	,1,1,1,1		
25	12	22388	WASHER, SHIFT CABLE ADAPTC	,1,1,1,1		
26	11	46438	NUT, SHIFT CABLE ADAPTOR ST	,1,1,1,1		
27		47501	BRACKET, MOUNTING (REAR)	2,2,2,2,		
28	10	47651	SCREW, MOUNTING BRACKET T	4,4,4,4,		
29	12	22993	LOCKWASHER, MOUNTING BRA	4,4,4,4,		