



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		62285	BRACKET, MOUNTING (REAR)	2			
2	10	47462	SCREW, MOUNTING BRACKET T	6			
3	13	32993	LOCKWASHER, MOUNTING BRA	6			
4		61815	BRACKET, MOUNTING (FRONT)	2			
5	10	47724	SCREW, MOUNTING BRACKET T	6			
6	13	32993	LOCKWASHER, MOUNTING BRA	6			
7	10	47654	SCREW, CLAMP - ADJUSTING TF	4			
8	13	32993	LOCKWASHER, CLAMP ADJUSTI	4			
9	54	47528	CLAMP, ADJUSTING TRUNNION	8			
10	11	29553	NUT, CLAMP ADJUSTING TRUNN	4			
11	14	48467	TAB WASHER, ADJUSTING TRUI	4			
12		52139A 2	BRACKET ASSEMBLY, MOUNTIN	4			
13	12	48611	WASHER, MOUNTING BRACKE	8			
14		47656	MOUNT, MOUNTING BRACKET	8			
15	10	52156	SCREW, ADJUSTING TRUNNION	4			
16		47518	TRUNNION, ADJUSTING - MOUN	4			
17	11	47525	NUT, JAM - ADJUSTING TRUNNII	4			
18	17	22116	PIN, ROLL - JAM NUT	4			
19		62255	BRACKET, MOUNTING - ENGINE	4			
19	27	65577	GASKET, CARBURETOR	2			
19	16	29208	STUD, CARBURETOR MOUNTING	2			
19	16	30669	STUD, CARBURETOR MOUNTING	2			
19		55241	GAUGE, OIL LEVEL (DIPSTICK)	1			
19		60212A 1	EXHAUST ELBOW RISER	2			
19	16	49545	STUD, EXHAUST ELBOW TO R	8			
19	22	32802	PLUG, EXHAUST ELBOW RISEI	2			
19	22	36305	ELBOW, EXHAUST RISER	2			
19	16	60607	STUD, MANIFOLD TO RISER (2 I	4			
19	11	49838	NUT, RISER TO EXHAUST ELBO	8			
19	13	37459	LOCKWASHER, RISER TO EXHAI	8			
19	27	52076	GASKET, ELBOW TO RISER	6			