



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66156A	BELL HOUSING ASSEMBLY (WIT	1		
1		65535A	BELL HOUSING ASSEMBLY (WIT	1		
2	27	64818	GASKET, DRIVE SHAFT HSG. T	1	--PART OF DRIVE SHAFT HOUSI	
3	22	33066	CONNECTOR, WATER HOSE T	1		
5	10	25612	SCREW, DRIVE - BELL HOUSIN	4		
6		63679	BUMPER, BELL HOUSING	1		
7	23	35088	BUSHING, BELL HOUSING (5/8	1		
8	26	45587	OIL SEAL, BELL HOUSING	1		
9	23	45588	BUSHING, BELL HOUSING (5/1	1		
10	27	35982	GASKET, RUBBER - BELL HOU:	1		
11	25	33504	"O" RING, BELL HOUSING	1		
12	12	38000	WASHER, BELL HOUSING(WIT	2		
12	12	72498	WASHER, BELL HOUSING(WIT	2		
13	16	59579	STUD, BELL HOUSING TO DRIV	6		
14	12	35935	WASHER, BELL HOUSING STUD	6		
15	11	34933	NUT, BELL HOUSING STUD	6		
16	10	36398	SCREW, PLUG - BELL HOUSING	2	WITHOUT GIMBALL TRIM SENC	
17	22	31345	FITTING, GREASE - BELL HOUSI	2	WITHOUT GIMBALL TRIM SENC	
18		29359	LUBRICAP, BELL HOUSING GRE	2	WITHOUT GIMBALL TRIM SENC	
19		60932A	BELLOWS ASSEMBLY, UNIVERS	1		
20	54	31765	CLAMP, UNIVERSAL JOINT BELL	2		
21	32	47642	HOSE< WATER - BELL HOUSING	1		
22	54	32523	CLAMP, WATER HOSE ATTACHII	2		
23		32734	BELLOWS, EXHAUST - BELL HOL	1		
24	54	32533	CLAMP, EXHAUST BELLOWS TO	2		
25		45589A	SHAFT ASSEMBLY, SHIFT - UPPE	1		
26		62104	SHAFT, SHIFT - INTERMEDIATE	1		
27	18	32665	COTTER PIN, INTERMEDIATE SF	1		
28	12	32666	WASHER, INTERMEDIATE SHIFT	1		
29		45518A	LEVER ASSEMBLY, UPPER SHIF	1		
30	12	39116	WASHER, UPPER SHIFT LEVER	1		
31	10	45590	SCREW, UPPER SHIFT LEVER TI	1		