


**BREAKDOWN OF WATER PUMP**

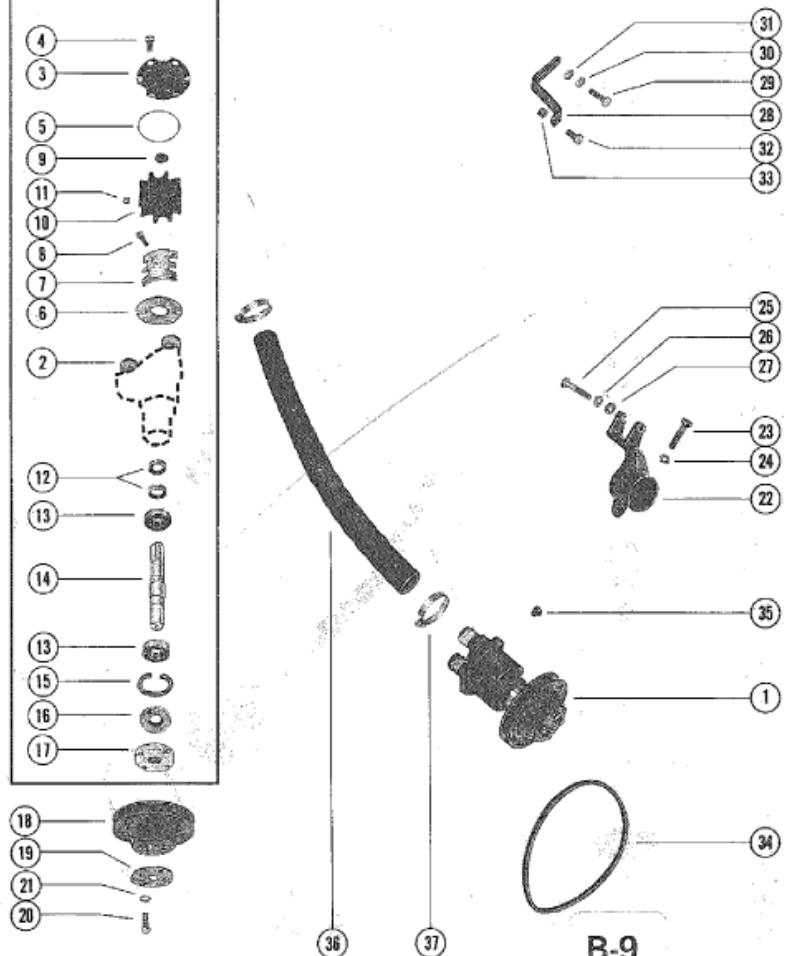

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	73823A 7	WATER PUMP ASSEMBLY	1		
2	23	47511	SLEEVE, WATER (OUTLET ANE	2		
3		59155	COVER, WATER PUMP	1		
4	10	28635	SCREW, COVER TO BODY	6		
5	25	59712	"O" RING, WATER PUMP BOD	1		
6		59503	WEAR PLATE	1		
7		59363A 1	CAM SEGMENT ASSEMBLY	1		
8	10	60777	SCREW, CAM SEGMENT	1		
9	19	59504	PLUG, IMPELLER	1		
10	47	59362A 1	IMPELLER ASSEMBLY	1		
11	28	56662	KEY, IMPELLER DRIVE	1		
12	26	23300	OIL SEAL, WATER PUMP SHAF	2		
13	30	72961	BALL BEARING, WATER PUMP	2		
14		59501	SHAFT, WATER PUMP	1		
15	53	23720	RING, SNAP - BALL BEARING R	1		
16	26	72785	OIL SEAL, WATER PUMP SHAF	1		
17		47530	HUB, WATER PUMP PULLEY	1		
18		73798	PULLEY, WATER PUMP	1		
19		58265	CLAMPING RING, PUMP PULLEY	1		
20	10	47277	SCREW, PULLEY TO WATER PU	1		
21	13	39107	LOCKWASHER, WATER PUMP P	4		
22		47488	BRACKET, WATER PUMP	1		
23	10	34354	SCREW, WATER PUMP BRACKE	1		
24	13	3548	LOCKWASHER WATER PUMP BF	1		
25	10	34353	SCREW, WATER PUMP BRACKE	1		
26	13	35048	LOCKWAHSER, WATER PUMP B	1		
27	12	20553	WASHER, WATER PUMP BRACK	1		
28		47544	BRACE, WATER PUMP ADJUSTI	1		
29	10	34353	SCRW, BRACE TO STEERING PL	1		
30	13	35048	LOCKWASHER, ADJUSTING BRA	1		
31	12	34714	WASHER, ADJUSTING BRACE SC	1		
32	10	35786	SCREW, ADJUSTING BRACE TO	1		
33	11	24883	NUT, ADJUSTING BRACE SCREW	1		
34	57	74271	BELT, WATER PUMP	1		
35	22	32802	PLUG, PIPE (FOR WATER PUMP	1		
35	22	32802	PLUG, PIPE (FOR WATER PUMP	1		
36	32	57230	HOSE, MOLDED - WATER PUMP	1		
37	54	32780	CLAMP, HOSE ATTACHING	2		