



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	57	77274	V-BELT, PUMP (32 1/2") - LOW M	1		
1	57	91035	V-BELT, PUMP (49 1/2") - HIGH M	1		
2		73873	PULLEY, STEERING PUMP	1		
3		57611	BRACKET, PUMP (LOW MOUNT F	1		
3		90981A 2	BRACKET, PUMP (HIGH MOUNT	1		
4	10	32132	SCREW, STEERING PUMP TO BF	1		
4	10	40001203	SCREW, STEERING PUMP TO BF	1		
5	13	35048	LOCKWASHER, STEERING PUMF	1		
5	13	40024008	LOCKWASHER, STEERING PUMF	1		
6	23	90523	SPACER, STEERING PUMP SCRE	1		
7	10	34354	SCREW, BRACKET TO CYLINDEF	2		
8	13	35048	LOCKWASHER, BRACKET SCREW	2		
9	12	38622	WASHER, BRACKET SCREW (FO	1		
10	11	86317	NUT, STEERING PUMP STUD (NI	1		
10	11	90517	NUT, STEERING PUMP STUD (M	1		
11		77912	OIL COOLER	1		
12	54	32781	CLAMP, OIL COOLER TO BRACKE	2		
13	54	64324	CLAMP, HOSE ATTACHING TO O	2		
14		49748A 1	BRACKET ASSEMBLY, OIL COOLI	1		
15		49735	BRACKET, OI COOLER MOUNT	1		
16	10	20359	SCREW, OIL COOLER MOUNT BF	1		
17	11	68411	NUT, MOUNT BRACKET SCREW	1		
18	22	37760	ELBOW, OIL COOLER	2		
19		85011A 1	BRACKET, HYDRAULIC PUMP	1		
20	10	26487	SCREW, BRACKET TO HYDRAUL	2		
20	10	40001194	SCREW, BRACKET TO HYDRAUL	2		
21	13	35048	LOCKWASHER, BRACKET SCREW	2		
21	13	40024008	LOCKWASHER, BRACKET SCREW	2		
22	23	90520	SPACER, BRACKET SCREW	2		
23		88777	BRACE, POWER STEERING PUM	1		
24	10	34353	SCREW, BRACE TO BRACKET (1'	1		
25	12	38622	WASHER, BRACE SCREW	1		
26	13	35048	LOCKWASHER, BRACE SCREW	1		
28	10	76926	SCREW, BRACE TO ENGINE (7/8	1		
28A	12	34714	WASHER, BRACE SCREW	1		
29	13	35048	LOCKWASHER, BRACE SCREW	1		