



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66417	BRACKET, MOUNTING - TRANSMISSION	2		
2	10	37269	SCREW, BRACKET TO TRANSMISSION	4		
3	13	32993	LOCKWASHER, BRACKET SCREW	4		
4	10	57357	SCREW, CLAMPING - MOUNTING	2		
5	13	32993	LOCKWASHER, CLAMPING SCREW	2		
6	11	29553	NUT, CLAMPING SCREW	2		
7		71128	BRACKET, MOUNTING - ENGINE	2		
8	10	37612	SCREW, MOUNTING BRACKET	4		
9	13	35048	LOCKWASHER, MOUNTING BRACKET	4		
8	10	48424	SCREW, MOUNTING BRACKET TRANSMISSION	2		
9	13	35048	LOCKWASHER, MOUNTING BRACKET TRANSMISSION	2		
10	10	37269	SCREW, CLAMPING - MOUNTING	2		
11	13	32993	LOCKWASHER, CLAMPING SCREW	2		
12	11	29553	NUT, CLAMPING SCREW	2		
13		66166	TRUNNION, ADJUSTING - MOUNTING	4		
14	13	68102	LOCKWASHER, MOUNTING BRACKET	4		
15		66284	BASE, ENGINE MOUNT	4		
16	11	20739	NUT, JAM - ENGINE MOUNT BRACKET	8		
17	14	66658	TAB WASHER, BASE NUT	2		