



| Parts List | | | | | | |
|------------|-------|----------|---------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 98626A 3 | EXHAUST SEPARATOR | 1 | | |
| 2 | 10 | 37612 | SCREW, EXHAUST SEPARATOR | 4 | | |
| 3 | 13 | 35048 | LOCKWASHER< EXHAUST SEPA | 4 | | |
| 4 | 25 | 35029 | "O" RING | 2 | | |
| 5 | | 60931 | RETAINER, WATER SHUTTER | 2 | | |
| 6 | | 60930 | WATER SHUTTER | 2 | | |
| 7 | | 94018A 1 | EXHAUST ELBOW ASSEMBLY | 2 | | |
| 8 | 10 | 58640 | SCREW, EXHAUST ELBOW TO S | 6 | | |
| 9 | 13 | 58643 | LOCKWASHER, EXHAUST ELBO\ | 6 | | |
| 10 | 32 | 48659 4 | HOSE, EXHASUT | 4 | | |
| 11 | 54 | 33683 | CLAMP, EXHAUST HOSE | 20 | | |
| 12 | | 94608A 1 | EXHASUT TUBE ASSEMBLY | 2 | | |
| 13 | | 98630A 1 | EXHAUST ELBOW ASSEMBLY | 2 | | |
| 14 | | 70981A 3 | EXHAUST BELLOWS | 2 | | |
| 15 | | 95740 | GROUND STRAP, EXHAUST BEL | 2 | | |
| 16 | 54 | 31765 | CLAMP, EXHAUST BELLOWS | 4 | | |
| 17 | | 41063A 1 | BRACKET ASSEMBLY, MOUNTIN | 1 | | |
| 18 | 10 | 24231 | SCREW, BRACKET | 1 | | |
| 19 | 11 | 46438 | NUT, BRACKET SCREW | 1 | | |
| 20 | | 45915 | TERMINAL BLOCK | 1 | | |