


Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		86019	HOUSING, FLYWHEEL	1		
2		86014A	COVER ASSEMBLY, FLYWHEEL	1		
3		87690	SEAL, FLYWHEEL HOUSING CO	1		
4	27	86015	GASKET, FLYWHEEL HOUSING	1		
5	10	20031	SCREW, COVER TO FLYWHEEL	8		
6	13	26992	LOCKWASHER, COVER SCREW	8		
7	10	34353	SCREW, HOUSING TO ENGINE	2		
8	13	37459	LOCKWASHER, HOUSING SCREW	7		
9	10	63826	SCREW, FLYWHEEL HOUSING T	2		
9	10	48424	SCREW, FLYWHEEL HOUSING T	2		
10	16	64066	STUD, FLYWHEEL HOUSING TO	1		
11	112	20572	WASHER, FLYWHEEL HOUSING	2		
12	11	32219	NUT, FLYWHEEL HOUSING STUI	1		
13		63832	COOLER, OIL (9")	1		
13		63832	COOLER, OIL (12") - V-DRIVE ONL	1		
14		49748A	BRACKET ASSEMBLY, OIL COOLI	1		
15	54	32781	CLAMP, OIL COOLER TO BRACKE	2		
16	10	27165	SCREW, OIL COOLER BRACKET	1		
17	11	52412	NUT, OIL COOLER BRACKET SCF	1		
18		49735	BRACKET, OIL COOLEER	1		
19	232	36365	SPACER, OIL COOLER BRACKET	2		

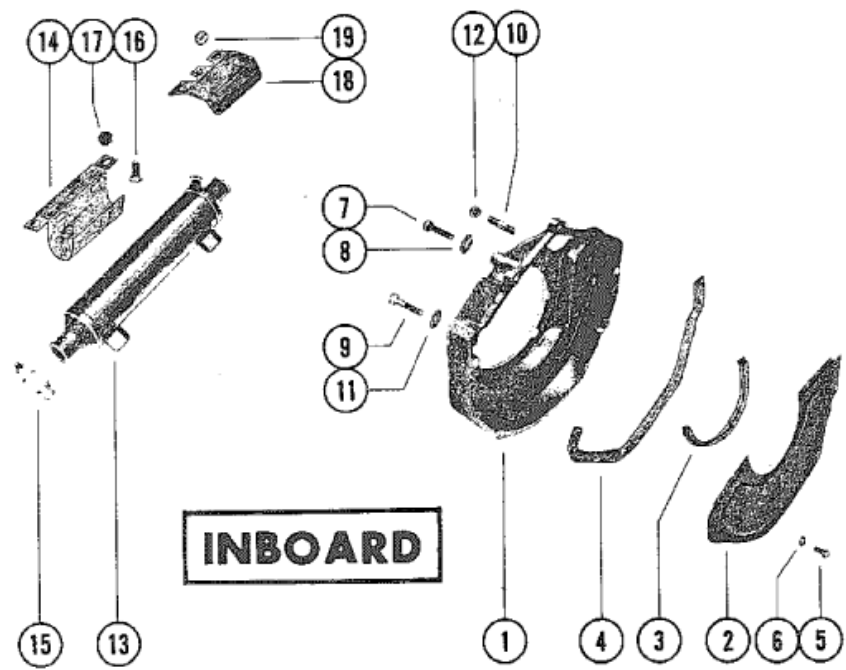

INBOARD