



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	79822A 2	STARTER MOTOR ASSY (DELCC	1		
1	50	76965A 3	STARTER MOTOR ASSY (DELCC	1		
1	50	79604A 3	STARTER MOTOR ASSY (DELCC	1		
3	12	29245	WASHER, STARTER MOTOR STI	1		
4	11	29031	NUT, STARTER MOTOR STUD S	1		
5		35363	BRACE, STARTER MOTOR STER	1		
6	10	35765	SCREW, BRACE TO ENGINE (5/8	1		
7	10	94435	SCREW, STARTER MOTOR TO C	1	STERN DRIVE	
7	10	34544	SCREW, STARTER MOTOR TO C	1	STERN DRIVE	
7	10	47462	SCREW, STARTER MOTOR TO C	2		
8	13	32993	LOCKWASHER, STARTER MOTO	2		
9	11	32219	NUT, STARTER TERMINAL - NO	OPT		
9	11	40020 4	NUT, STARTER TERMINAL - ME	OPT		
10	13	26995	LOCKWASHER, STARTER TERM	2		
11	11	26419	NUT, STARTER TERMINAL (#8)	2		
12		34625	WATER TEMPERATURE SENDE	1		
13	13	26996	LOCKWASHER, WATER TEMPE	1		
14	11	68219	NUT, WATER TEMPERATURE	1		
15		90806	OIL PRESSURE SENDER ASSEM	1		
16	13	26996	LOCKWASHER, OIL PRESSURE	1		
17	11	68219	NUT, OIL PRESSURE SENDER	1		
15		38559	SWITCH, OIL PRESSURE INBOA	1		
16	13	26996	LOCKWASHER, SWITCH TERM	1		
17	11	68219	NUT, SWITCH TERMINAL INB	1		
18	22	46932	ELBOW, OIL PRESSURE SENDE	1		
19	22	73676	NIPPLE, OIL PRESSURE SENDE	1		
20		78403A 1	ALTERNATOR ASSEMBLY (MOTC	1		
20	11	30968	NUT, GROUND CABLE TO ALTE	1		
20	13	26996	LOCKWASHER, GROUND CABLE	1		
20	11	20890	NUT, ALTERNATOR TERMINAL	1		
20	13	26992	LOCKWASHER, ALTERNATOR TI	1		
20	12	96457	WASHER, BOOT ATTACHING (PT	1		
26		85013	BRACE, ALTERNATOR ADJUSTI	1		
27	10	73657	SCREW, ALTERNATOR BRACE T	1		
27	10	29198	SCREW, ALTERNATOR BRACE T	1		
28	13	39107	LOCKWASHER, ALTERNATOR BI	1		
29	12	26168	WASHER, ALTERNATOR BRACE	1		
30	23	36534	SPACER, ALTERNATOR BRACE	1		
31	10	27165	SCREW, ALTERNATOR BRACE T	1		
32	13	35048	LOCKWASHER, ALTERNATOR N	1		
32	12	20552	WASHER, ALTERNATOR BRACE	1		