



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62285	BRACKET, MOUNTING (REAR)	2		
2	10	47462	SCREW, MOUNTING BRACKET T	4		
3	13	32993	LOCKWASHER, MOUNTING BRA	4		
4	10	47654	SCREW, CLAMPING - MOUNTING	2		
5	13	32993	LOCKWASHER, CLAMPING SCRE	2		
6	54	47528	CLAMP, ADJUSTING TRUNNION	4		
7	11	29553	NUT, SCREW CLAMPING	2		
8		71128	BRACKET, MOUNTING - ENGINE	2		
9	10	37612	SCREW, MOUNTING BRACKET T	4		
10	13	35048	LOCKWASHER, MOUNTING BRA	4		
11	10	37269	SCREW, CLAMPING - MOUNTING	2		
12	13	32993	LOCKWASHER, SCREW CLAMPIN	2		
13	11	29553	NUT, SCREW CLAMPING	2		
14		66166	TRUNNION, ADJUSTING - MOUN	4		
15	13	68102	LOCKWASHER, MOUNTING BRA	4		
16		66284	BASE, ENGINE MOUNT	4		
17	11	20739	NUT, JAM - ENGINE MOUNT BA	8		
18	14	66658	TAB WASHER, ENGINE MOUNT I	2		
--	16	46857	STUD, CARBURETOR MOUNTING	2		
--	10	228701	SCREW, CARBURETOR MOUNTING	2		
--	13	39107	LOCKWASHER, CARBURETOR M	2		
--		49457	GAUGE, OIL LEVEL (DIPSTICK)	1		
--		60212A 1	EXHAUST ELBOW RISER	2		
--	16	49545	STUD, EXHAUST ELBOW TO R	8		
--	22	32802	PLUG, EXHAUST ELBOW RISEI	2		
--	22	36305	ELBOW, EXHAUST RISER	2		
--	16	60607	STUD, MANIFOLD TO RISER (2 1	4		
--	11	49838	NUT, RISER TO EXHAUST ELBO	8		
--	13	37459	LOCKWASHER, RISER TO EXHA	8		
--	27	52076	GASKET, ELBOW TO RISER	6		
--		73813A 1	END CAP, REAR	2		
--	27	73814	GASKET, END CAP TO EXHAUST	2		
--	10	25299	SCREW, END CAP ATTACHING (8		