



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		78984A	1 THERMOSTATE HOUSING ASSE	1		
2	23	47511	SLEEVE, THERMOSTAT HOUSIN	1		
3	22	47540	PLUG, ALLEN HEAD	2		
4	22	33198	PLUG, PIPE	1		
5	10	33389	SCREW, HOUSING TO INTAKE M	2		
6	13	37459	LOCKWASHER, THERMOSTATE	2		
7	27	53045	GASKET, THERMOSTAT HOUSIN	1		
8		59137	THERMOSTAT (143)	1		
9		47441	COVER, THERMOSTAT	1		
10	27	48818	GASKET, THERMOSTAT COVER	1		
11	32	33189	HOSE, THERMOSTAT HOUSING	1		
12	54	32781	CLAMP, HOSE TO THERMOSTAT	2		
13	32	76847A	1 HOSE ASS'Y HSG. TO TRANSOM	1		
13	32	77479A	1 HOSE ASS'Y HSG. TO COOLER (A	1		
14	54	47715	CLAMP, HOSE ATTACHING MCM	1		
14	5	64489	CLAMP, HOSE ATTACHING MCM	2		
15	54	32780	CLAMP, HOSE ATTACHING MCM	2		
16		73738	ELBOW, EXHAUST (MCM 228)	2		
16		73660	ELBOW, EXHAUST - PORT MCM	1		
16		73659	ELBOW, EXHAUST - STARBOARD	1		
17	10	60992	SCREW EXHUAST ELBOW (1 1/4	6		
17	10	58640	SCREW, EXHUAST ELBOW (1 1/	6		
18	13	35048	LOCKWASHER, ELBOW SCREW	6		
19		70981	BELLOWS, EXHUAST ELBOW MC	2		
20	54	33683	CLAMP, BELLOW TO EXHUAST E	4	MCM 228 AND MCM 228 TR	
20	54	31765	CLAMP, BELLOW TO EXHUAST E	4	MCM 228 AND MCM 228 TR	
21	25	35029	"O" RING, EXHUAST ELBOW TO	2	MCM 228 AND MCM 228 TR	
22		60930	SHUTTER, WATER EXHAUST SE	2	MCM 228 AND MCM 228 TR	
23		60931	RETAINER, WATER SHUTTER (A	2		
23		63151	RETAINER, WATER SHUTTER (A	2		
24		59825	SEPARATOR, EXHAUST MCM 22	1		
25	10	60835	SCREW, SPEARATOR TO HOUSI	1		
26	10	60992	SCREW, SEPARATOR TO HOUSI	6		
27	13	35048	LOCKWASHER, SEPARATOR SCI	6		

STERN DRIVE ONLY
 13 14 15

B-5