


BREAKDOWN OF WATER PUMP

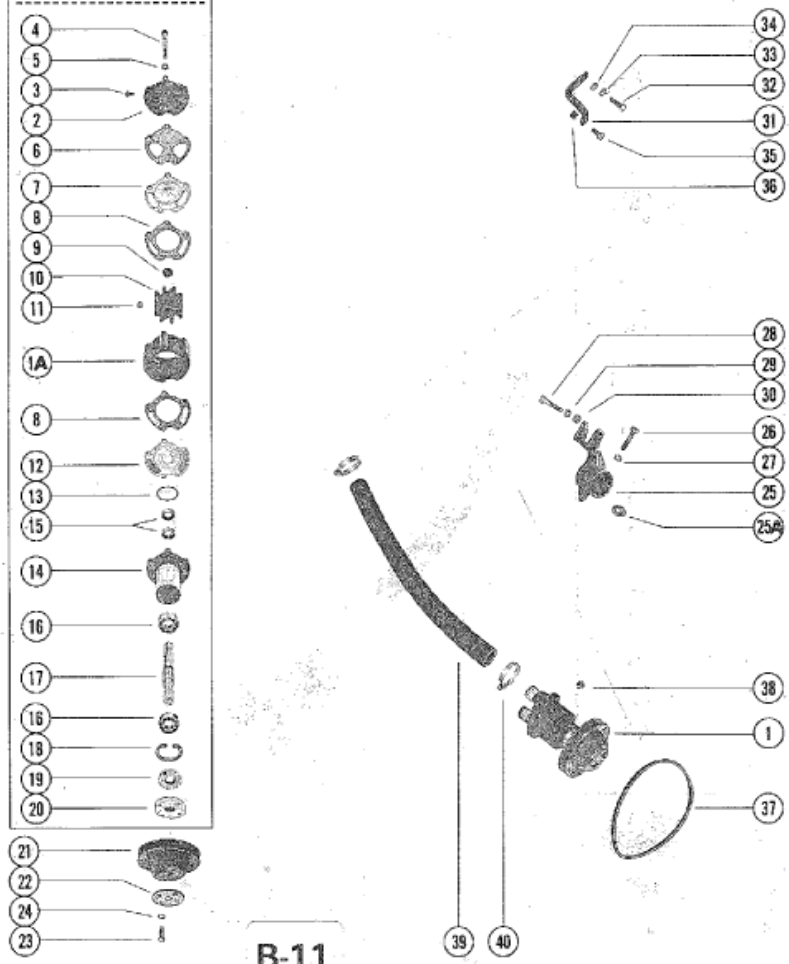

B-11

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A11	WATER PUMP ASSEMBLY	1	SERIAL 04775785-09999999	
1A	46	72774	BODY, WATER PUMP (PLASTIC)	1		
2		72776	COVER, WATER PUMP	1		
3	10	28642	SCREW, WATER PUMP SLEEVE	4		
4	10	63328	SCREW, COVER TO BODY (3")	5		
5	11	20739	WASHER, COVER TO BODY SCR	5		
6	27	72779	GASKET, COVER TO OUTER W	1		
7		72777	WEAR PLATE	1		
8	27	72780	GASKET, BODY TO WEAR PLA	2		
9	19	59504	PLUG, IMPELLER	1		
10	47	59362A 1	IMPELLER ASSEMBLY	1		
11	28	56662	KEY, IMPELLER DRIVE	1		
12		72778	WEAR PLATE	1		
13	25	37340	"O" RING, PUMP HOUSING TO	1		
14	46	71497A 2	PUMP HOUSING	1		
15	26	23300	OIL SEAL, WATER PUMP SHA	2		
16	30	72961	BALL BEARING, WATER PUM	2		
17		59501	SHAFT, WATER PUMP	1		
18	53	23720	RING, SNAP - BALL BEARING	1		
19	26	72785	OIL SEAL, WATER PUMP SHA	1		
20		47530	HUB, WATER PUMP PULLEY	1		
21		73798	PULLEY, WATER PUMP	1		
22		58265	CLAMPING RING, PUMP PULLEY	1		
23	10	47277	SCREW, PULLEY TO WATER PU	4		
24	13	39107	LOCKWASHER, WATER PUMP P	4		
25		47488	BRACKET, WATER PUMP	1		
25A	12	79643	WASHER, BRACE SCREW (FOR	1		
26	10	34354	SCREW, WATER PUMP BRACKE	1		
27	13	35048	LOCKWASHER, WATER PUMP B	1		
28	10	34353	SCREW, WATER PUMP BRACKE	1		
29	13	35048	LOCKWASHER, WATER PUMP B	1		
30	12	34714	WASHER, WATER PUMP BRACK	1		
31		47544	BRACE, WATER PUMP ADJUSTI	1		
32	10	34353	SCREW, BRACE TO STEERING F	1		
33	13	35048	LOCKWASHER, ADJUSTING BRA	1		
34	12	34714	WASHER, ADJUSTING BRACE SI	1		
35	10	35786	SCREW, ADJUSTING BRACE TO	1		
36	11	24883	NUT, ADJUSTING BRACE SCREW	1		
37	57	74271	BELT, WATER PUMP	1		
38	22	32802	PLUG, PIPE (FOR WATER PUMP	1		
39	22	86316	HOSE, MOLDED, WATER PUMP	1		