



**JACKSHAFT
 MODELS**

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		98626A 3	EXHAUST SEPARATOR	1		
2	10	37612	SCREW, EXHAUST SEPARATOR	4		
3	13	35048	LOCKWASHER< EXHAUST SEPA	4		
4	25	35029	"O" RING	2		
5		60931	RETAINER, WATER SHUTTER	2		
6		60930	WATER SHUTTER	2		
7		94018A 1	EXHAUST ELBOW ASSEMBLY	2		
8	10	58640	SCREW, EXHAUST ELBOW TO S	6		
9	13	58643	LOCKWASHER, EXHAUST ELBO\	6		
10	32	48659 4	HOSE, EXHASUT	4		
11	54	33683	CLAMP, EXHAUST HOSE	20		
12		94608A 1	EXHASUT TUBE ASSEMBLY	2		
13		98630A 1	EXHAUST ELBOW ASSEMBLY	2		
14		70981A 3	EXHAUST BELLOWS	2		
15		95740	GROUND STRAP, EXHAUST BEL	2		
16	54	31765	CLAMP, EXHAUST BELLOWS	4		
17		41063A 1	BRACKET ASSEMBLY, MOUNTIN	1		
18	10	24231	SCREW, BRACKET	1		
19	11	46438	NUT, BRACKET SCREW	1		
20		45915	TERMINAL BLOCK	1		