



| Parts List | | | | | | |
|------------|-------|----------|------------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 45 | 94819A 3 | DRIVE SHAFT ASSEMBLY | 1 | | |
| 2 | | 52504 | FLANGE, DRIVE SHAFT | 2 | | |
| 3 | | 61221 | COVER AND BEARING KIT | 2 | | |
| 4 | 22 | 74036 | GREASE FITTING | 2 | | |
| 5 | 10 | 52498 | SCREW, DRIVE SHAFT FLANGE | 8 | | |
| 6 | 11 | 34933 | NUT, FLANGE SCREW | 8 | | |
| 7 | | 42304A 2 | BEARING SUPPORT ASSEMBLY | 1 | | |
| 8 | 26 | 93924 | OIL SEAL | 1 | | |
| 9 | 30 | 93944A 1 | BALL BEARING | 1 | | |
| 10 | 53 | 93914 | SNAP RING, BALL BEARING | 1 | | |
| 11 | 22 | 74036 | GREASE FITTING | 1 | | |
| 12 | | 93908A 1 | SHAFT ASSEMBLY, INPUT | 1 | | |
| 13 | 19 | 93921 | EXPANSION PLUG | 1 | | |
| 14 | 53 | 93915 | SNAP RING, INPUT SHAFT | 1 | | |
| 15 | 22 | 74036 | GREASE FITTING | 1 | | |
| 16 | | 93918A 1 | SHIELD ASSEMBLY, LOWER | 2 | | |
| 17 | 10 | 76926 | SCREW, LOWER SHIELD TO SUF | 6 | | |
| 18 | | 93919A 1 | SHIELD ASSEMBLY, UPPER | 2 | | |
| 19 | 10 | 96995 | SCREW, UPPER AND LOWER SH | 8 | | |
| 20 | 11 | 99405 | NUT, SHIELD SCREW | 8 | | |
| 21 | | 93906A 2 | SHAFT ASSEMBLY, OUTPUT | 1 | | |
| 22 | 25 | 25439 | O-RING | 2 | | |
| 23 | 53 | 94104 | SNAP RING, BALL BEARING, INT | 1 | | |
| 24 | 30 | 62780A 1 | BALL BEARING | 1 | | |
| 25 | | 49736A 3 | COUPLING ASSEMBLY | 1 | | |
| 26 | 23 | 95966 | BUSHING, COUPLING | 1 | | |
| 27 | 12 | 34567 | WASHER, HOUSING SCREW | 6 | | |
| 28 | 11 | 98533 | NUT, HOUSING SCREW | 6 | | |
| 29 | 53 | 94103 | SNAP RING, EXTERNAL | 1 | | |
| 30 | 10 | 57053 | BOLT, BEARING SUPPORT (4-1/2 | 2 | | |
| 32 | 12 | 42307 | WASHER, BEARING SUPPORT B | 4 | | |
| 33 | 11 | 28040 | NUT, BEARING SUPPORT BOLT | 2 | | |
| 34 | 84 | 41575A 1 | HARNESS ASSEMBLY, SHIFT AN | 1 | | |