



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	98423A 7	WIRING HARNESS (898/200)	1		
1	84	98423A 8	WIRING HARNESS (228/230/260)	1		
2		26079A 2	PLATE, WIRING HARNESS TO M	1		
3	10	34696	SCREW, WIRING HARNESS PLA	4		
4		98493A 2	BRACKET, MOUNTING	1		
5	10	49668	SCREW, MOUNTING BRACKET	3		
6	13	26992	LOCKWASHER, MOUNTING BRA	3		
7	390	7804A 3	IGNITION AMPLIFIER	1		
8	10	76596	SCREW, IGNITION AMPLIFIER (1-	3		
9	13	26992	LOCKWASHER, IGNITION AMPLII	3		
10	23	92152	SPACER, IGNITION AMPLIFIER A	3		
11		97258A 1	WATER TEMPERATURE SENDER	1		
11		49734A 1	WATER TEMPERATURE SENDER	OPT		
12	13	26996	LOCKWASHER, WATER TEMPE	1		
13	11	68219	NUT, WATER TEMPERATURE	1		
14		90806	OIL PRESSURE SENDER	1		
14		37293	OIL PRESSURE SENDER (DUAL)	OPT		
15	13	26996	LOCKWASHER, OIL PRESSURE	1		
16	11	68219	NUT, OIL PRESSURE SENDER	1		
17	22	46932	ELBOW, OIL PRESSURE SENDEF	1		
18	22	42554	NIPPLE, OIL PRESSURE SENDEF	1		
19		41170A 2	BRACKET, MOUNTING	1		
20	10	98260	SCREW, MOUNTING BRACKET (E	1		
21	13	35048	LOCKWASHER, MOUNTING BRA	1		
22	54	78945	CLAMP, BRACKET SCREW	1		
23	16	24585	STUD, MOUNTING BRACKET	1		
24	12	20086	WASHER, MOUNTING BRACKET	1		
25	11	24883	NUT, MOUNTING BRACKET STU	1		
26	10	32132	SCREW, MOUNTING BRACKET	1		
27	13	35048	LOCKWASHER, MOUNTING BRA	1		
28	23	88275	SPACER, MOUNTING BRACKET	1		
29	88	93582	CIRCUIT BREAKER (60 AMP)	AR		
29	88	11178	CIRCUIT BREAKER (50 AMP)	AR		
30	13	26996	LOCKWASHER, CIRCUIT BREAK	2		
31	11	68219	NUT, CIRCUIT BREAKER TERMIP	2		
32	10	45862	SCREW, CIRCUIT BREAKER (7/8	2		
33	10	45218	SCREW, INSULATOR (3/8")	1		
34	12	56681	WASHER, CIRCUIT BREAKER SC	2		
35	11	46438	NUT, INSULATOR SCREW	3		
36	85	96819	INSULATOR, CIRCUIT BREAKER	1		
37	89	96054	STARTER SOLENOID	1		