



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1376	5744A 1	CARBURETOR ASSEMBLY, COMI	1	SERIAL 00000000-04465029	
-	1376	6152A 1	CARBURETOR ASSEMBLY, COMI	1	SERIAL 04465030-09999999	
1		N.S.S.	AIR HORN (NOT SOLD SEPARA	1		
2	1397	5836	POWER PISTON ASSEMBLY	1		
3			GASKET, AIR HORN	1		3,4,0
4	10	33043	SCREW, AIR HORN TO FLOAT	7		
5	10	33048	SCREW, AIR HORN SCREW	1		
6	13	26996	LOCKWASHER, AIR HORN SCF	8		
7	1397	3330	NUT, FUEL INLET-AIR HORN	1		
8	35	53336	FILTER, FUEL INLET-AIR HORN	1		
9	24	48143	SPRING,FUEL INLET-AIR HORN	1		
10			GASKET, FUEL INLET FILTER (I	1		3,4,0
11			GASKET, FUEL INLET FILTER (I	1		3,4,0
12	1397	5837	FLOAT ASSEMBLY	1		
13	17	33037	PIN, HINGE - FLOAT TO AIR HO	1		4,0
14			CLIP, HINGE PIN	1		4,0
15			INLET NEEDLE AND SEAT ASS	1		3,4,0
16			GASKET, INLET NEEDLE AND (	1		
17	1397	5881	FLOAT BOWL ASSEMBLY	1	SERIAL 00000000-04465029	
17	1397	6366	FLOAT BOWL ASSEMBLY	1	SERIAL 04465030-09999999	
18		N.S.S.	VENTURI CLUSTER ASSEMBLY	1		
19			GASKET, VENTURI CLUSTER	1		3,4,0
20	1397	5843	SCREW, VENTURI CLUSTER T	1		
21			GASKET, VENTURI CLUSTER (	1		3,4
22	1397	5842	SCREW, VENTURI CLUSTER T	2		
23			GUIDE, PUMP DISCHARGE - FL	1		4,0
24			SPRING, PUMP DISCHARGE - F	1		4,0
25			BALL, PUMP DISCHARGE - FLO	1		4,0
26			POWER VALVE ASSEMBLY, FLI	1		0
27			GASKET, POWER VALVE	1		3,4,0
28	1397	5882	JET, FLOAT BOWL (STANDARC	2	SERIAL 00000000-04465029	
28	1397	6365	JET, FLOAT BOWL (STANDARC	2	SERIAL 04465030-09999999	
29	1397	5833	LEVER, PUMP - AIR HORN	1	SERIAL 00000000-04465029	
29	1397	6364	LEVER, PUMP - AIR HORN	1	SERIAL 04465030-09999999	
30	10	33047	SCREW, AIR HORN PUMP LEVI	1		
31	1397	5834	PUMP SHAFT AND LEVER ASS	1		
32	1397	5845	ROD, PUMP	1		
33			CLI, RETAINER - PUMP BOW	1		4,0
34			PUMP ASSEMBLY, FLOAT BOW	1		4,0
35			CLIP, RETAINER - FLOAT BOW	1		4,0
36			SPRING, PUMP RETURN, FLO	1		0