



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		63827	HOUSING, FLYWHEEL	1		
3		63833	COVER, FLYWHEEL HOUSING	1		
4	10	20031	SCREW, COVER TO FLYWHEEL H	4		
5	13	26992	LOCKWASHER, COVER SCREW	4		
8	10	47651	SCREW, FLYWHEEL HOUSING T	2		
8A	13	37272	LOCKWASHER, FLYWHEEL HOU	5		
9	10	59589	SCREW, FLYWHEEL HOUSING T	4		
9A	12	27025	WASHER, FLYWHEEL HOUSING	1		
10	10	34613	SCREW, GROUND CABLE TO FL\	1		
11	13	37459	LOCKWASHER, GROUND CABLE	2		
12	11	32219	NUT, GROUND CABLE TO FLYWI	2		
13		63832 1	COOLER, OIL (9")	1		
13		63832 2	COOLER, OIL (12") V-DRIVE ONL\	1		
14		56329	BRACKET, COOLER CLAMPING (L	1		
15		56328	BRACKET, COOLER CLAMPING (R	1		
16	10	21625	SCREW, COOLER BRACKET ATT	2		
17	11	30506	NUT, COOLER BRACKET ATTAC	2		