



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62285	BRACKET, MOUNTING (REAR)	2		
2	10	47462	SCREW, MOUNTING BRACKET T	4		
3	13	32993	LOCKWASHER, MOUNTING BRA	6		
4	10	47654	SCREW, CLAMP - ADJUSTING TF	4		
5	13	32993	LOCKWASHER, CLAMP ADJUSTI	4		
6	54	47528	CLAMP, ADJUSTING TRUNNION	4		
7	11	29553	NUT, CLAMP ADJUSTING TRUNN	4		
8		66169	BRACKET, MOUNTING (FRONT)	2		
9	10	47724	SCREW, MOUNTING BRACKET T	6		
10	13	32993	LOCKWASHER, MOUNTING BRA	6		
11	10	37629	SCREW, CLAMPING - MOUNTING	2		
12	13	32993	LOCKWASHER, CLAMPING - MOL	2		
13	11	29553	NUT, SCREW CLAMPING	2		
14		66166	TRUNNION, ADJUSTING - MOUN	4		
15	14	66658	TAB, WASHER, BASE NUT	4		
16		66284	BASE, MOUNTING - ENGINE	4		
17	13	68102	LOCKWASHER, MOUNTING BRA	4		
18	11	20739	NUT, JAM - ENGINE MOUNT BAS	8		
--	27	70143	GASKET, CARBURETOR	2		
--	16	70236	STUD, CARBURETOR MOUNTINI	2		
--	16	70237	STUD, CARBURETOR MOUNTINI	2		
--		55241	GAUGE, OIL LEVEL (DIPSTICK)	1		
--		602212A1	EXHAUST ELBOW RISER	2		
--	16	49545	STUD, EXHAUST ELBOW TO F	8		
--	22	32802	PLUG, EXHAUST ELBOW RISEI	2		
--	22	36305	ELBOW, EXHAUST RISER	2		
--	16	60607	STUD, MANIFOLD TO RISER (2 1	4		
--	11	49838	NUT, RISER TO EXHAUST ELBO	8		
--	13	37459	LOCKWASHER, RISER TO EXHA	8		
--	27	52076	GASKET, ELBOW TO RISER	6		