


BREAKDOWN OF WATER PUMP

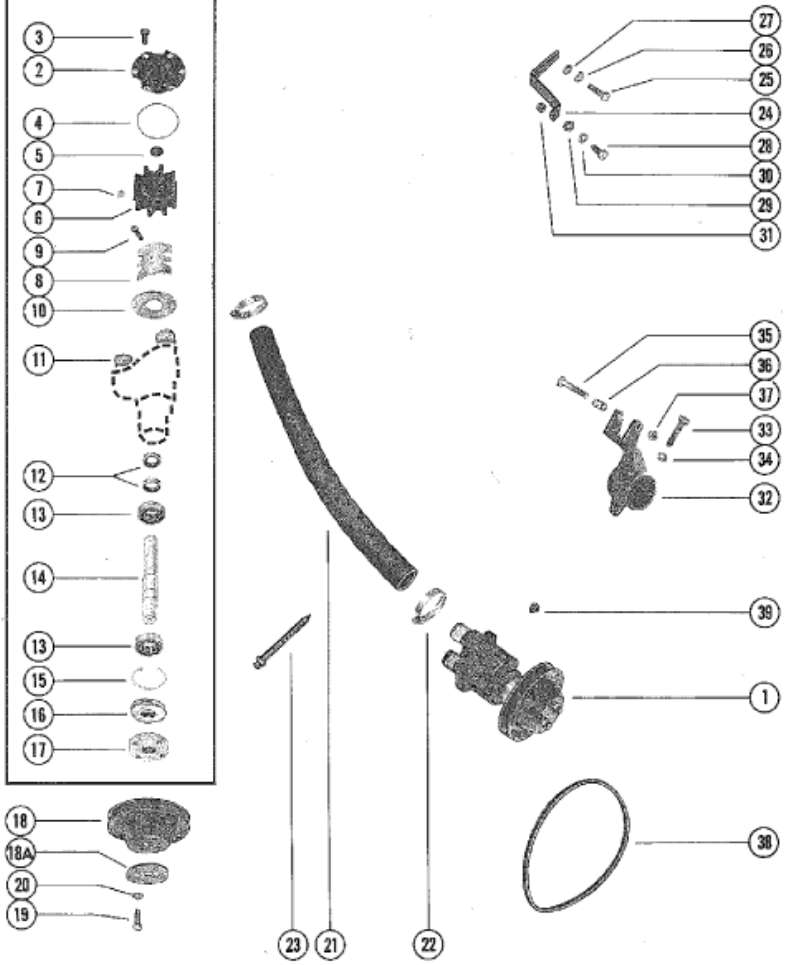

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	63450A	WATER PUMP ASSEMBLY, COMF	1	SERIAL 00000000-04476955	
1	46	73823A	WATER PUMP ASSEMBLY, COMF	1	SERIAL 04476956-09999999	
2		59155	COVER, WATER PUMP	1		
3	10	28635	SCREW, WATER PUMP COVE	6		
4	25	59712	"O" RING, WATER PUMP COVE	1		
5	19	59504	PLUG, IMPELLER	1		
6	47	59362A	IMPELLER ASSEMBLY	1		
7	28	56662	KEY, IMPELLER DRIVE	1		
8		59363A	CAM SEGMENT ASSEMBLY, W	1		
9	10	60777	SCREW, CAM SEGMENT ATTA	1		
10		59503	WEAR PLATE	1		
11	23	47511	SLEEVE, WATER PUMP COVE	2		
12	26	23300	OIL SEAL, WATER PUMP SHAF	2		
13	30	20861	BALL BEARING, WATER PUMP	2	SERIAL 00000000-04476955	
13	30	72961	BALL BEARING, WATER PUMP	2	SERIAL 04476956-09999999	
14		59501	SHAFT, WATER PUMP	1		
15	53	23720	RING, SNAP - BALL BEARING R	1		
16	26	59564	OIL SEAL, WATER PUMP SHAF	1	SERIAL 00000000-04476955	
16	26	72785	OIL SEAL, WATER PUMP SHA	1	SERIAL 04476956-09999999	
17		47530	HUB, WATER PUMP PULLEY	1		
18		59762	PULLEY, WATER PUMP	1	SERIAL 00000000-04476955	
18		73798	PULLEY, WATER PUMP	1	SERIAL 04476956-09999999	
18A		58265	CLAMPING RING, PULLEY	1	SERIAL 04476956-09999999	
19	10	20705	SCREW, PULLEY TO WATER PU	4	SERIAL 00000000-04476955	
19	10	33524	SCREW, PULLEY TO WATER PU	4	SERIAL 00476956-09999999	
20	13	39107	LOCKWASHER, WATER PULLEY	4		
21	32	62010	HOSE, PUMP TO OIL COOLER	1		
22	54	32780	CLAMP, WATER PUMP HOSE	2		
23		61990	STA-STRAP, HOSE ATTACHING	2		
24		54478	BRACE, WATER PUMP ADJUSTI	1		
25	10	34353	SCREW, ADJUSTING BRACE TO	1		
26	13	35048	LOCKWASHER, ADJUSTING BRA	1		
27	12	34714	WASHER, ADJUSTING BRACE S	1		
28	10	26632	SCREW, ADJUSTING BRACE TO	1		
29	12	20553	WASHER, ADJUSTING BRACE S	1		
30	13	35048	LOCKWASHER, ADJUSTING BRA	1		
31	11	32219	NUT, ADJUSTING BRACE SCRE	1		
32		4951	BRACKET, WATER PUMP	1		
33	10	34354	SCREW, WATER PUMP BRACKE	1		
34	13	35048	LOCKWASHER, WATER PUMP B	1		
35	10	62409	SCREW, WATER PUMP BRACKE	1		