



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	71150	WIRING HARNESS	1		
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		70649	BRACKET, MOUNTING-HARNESS	1		
5	10	47576	SCREW, MOUNTING BRACKET A	1		
6	13	39107	LOCKWASHER, MOUNTING BRA	1		
7		54869	BRACKET, MOUNTING-STARTER	1		
8		36177	INSULATOR, SOLENOID TO MOL	1		
9	54	61001	CLIP, WIRING HARNESS TO ROC	1		
10	89	76416A	STARTER SOLENOID	1		
11	10	22956	SCREW, STARTER SOLENOID TI	2		
12	12	22937	WASHER, STARTER SOLENOID	2		
13	11	20586	NUT, STARTER SOLENOID SCRE	2		
14	13	26996	LOCKWASHER, STARTER SOLEI	2		
15	11	20645	NUT, STARTER SOLENOID TERM	2		
16	13	26993	LOCKWASHER, STARTER SOLOI	2		
17	11	20083	NUT, STARTER SOLENOID TERM	2		
17	11	21908	NUT, STARTER SOLENOID TERM	2		
18		59646	CABLE, SOLENOID TO MOTOR (Y	1	SERIAL 00000000-04497140	
18	84	77042	CABLE, SOLENOID TO MOTOR (Y	1	SERIAL 04497141-09999999	
19	88	65093	CIRCUIT BREAKER (NOT AS SHC	1		
--	11	20645	NUT, CIRCUIT BREAKER TERM	2		
--	13	26996	LOCKWASHER, CIRCUIT BREA	2		
20	10	47618	SCREW, CIRCUIT BREAKER TO E	2		
21	25	61999	GROMMET, CIRCUIT BREAKER S	4		
22	12	47960	WASHER, CIRCUIT BREAKER SC	4		
23	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
24	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
25		45915	TERMINAL BLOCK	1	SERIAL 04474706-09999999	
26	10	48591	SCREW, TERMINAL BLOCK TO M	1	SERIAL 04474706-09999999	
27	10	62568	SCREW, TRIM LEADS TO TERMI	1	SERIAL 04474706-09999999	