

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		65535A 4	BELL HOUSING ASSEMBLY	1		
2	27	64818	GASKET, DRIVE SHAFT HSG. T	1		
3	22	33066	CONNECTOR, WATER HOSE T	1		
4	10	25612	SCREW, DRIVE - BELL HOUSIN	4		
5		63679	BUMPER, BELL HOUSING	1		
6	23	35088	BUSHING, BELL HOUSING (5/8	1		
7	26	45587	OIL SEAL, BELL HOUSING	1		
8	23	45588	BUSHING, BELL HOUSING (5/1	1		
9	27	35982	GASKET, RUBBER - BELL HOUSI	1		
10	25	33504	"O" RING, BELL HOUSING	1		
11	12	72498	WASHER, SYNTHANE - BELL HO	2		
12	16	59579	STUD, BELL HOUSING TO DRIVE	6		
13	12	35935	WASHER, BELL HOUSING STUD	6		
14	11	34933	NUT, BELL HOUSING STUD	6		
15		60932A 1	BELLOWS ASSEMBLY, UNIVERS.	1		
16	54	31765	CLAMP, UNIVERSAL JOINT BELL	2		
17	32	47642	HOSE, WATER - BELL HOUSING	1		
18	54	32523	CLAMP, WATER HOSE ATTACHM	2		
19		32734	BELLOWS, EXHAUST (MERCURIE	1		
19		78458	TUBE, EXHAUST (MERCURISER	1		
20	54	32533	CLAMP, EXHAUST BELLOWS AT	2		
21		45589A 1	SHAFT ASSEMBLY, SHIFT - UPPE	1		
22		62104	SHAFT, SHIFT - INTERMEDIATE	1		
23	18	32665	COTTER PIN, INTERMEDIATE SH	1		
24	12	32666	WASHER, INTERMEDIATE SHIFT	1		
25		45518A 1	LEVER ASSEMBLY, UPPER SHIF	1		
26	12	39116	WASHER, UPPER SHIFT LEVER	1		
27	10	45590	SCREW, UPPER SHIFT LEVER TI	1		

