



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY	1	
2	25	21720	"O" RING, HYDRAULIC PUMP T	4	
3		48077A 3	CONTROL VALVE ASSEMBLY	1	
	25	21720	"O" RING, HYDRAULIC PUMP T	4	
4	22	38609	PLUG, CONTROL VALVE	1	
5	10	21091	SCREW, CONTROL VALVE TO H	4	
6	13	26992	LOCKWASHER, CONTROL VALVE	4	
7		58397A 3	BRACKET ASSEMBLY, MOUNTIN	1	
8		58491	BUMPER, RUBBER - PUMP MO	2	
9	10	59784	SCREW, PUMP MOUNTING BRA	6	
10	12	29245	WASHER, PUMP MOUNTING BR	6	
11		45377	BRACKET, MOUNTING - HYDRAL	2	
12	10	24234	SCREW, HYDRAULIC PUMP TO F	4	
13	13	39107	LOCKWASHER, HYDRAULIC PUN	4	
14	11	21908	NUT, HYDRAULIC PUMP SCREW	4	
15	10	68298	SCREW, PUMP MOUNTING BRA	2	
16	11	35304	NUT, PUMP MOUNTING BRACKE	2	
17	84	74023	CONNECTOR AND HARNESS (GF	1	
18		45559	TERMINAL BLOCK, HYDRAULIC	1	
19	10	48409	SCREW, TERMINAL BLOCK TO H	2	
20	10	62568	SCREW, HARNESS LEADS TO TE	2	
21		57756	WIRING HARNES, HYDRAULIC P	1	
23	89	68258	STARTER SOLENOID	1	
24	13	26996	LOCKWASHER, STARTER SOLE	2	
25	11	68219	NUT, STARTER SOLENOID TERM	2	
26	13	26993	LOCKWASHER, STARTER SOLE	2	
27	11	68292	NUT, STARTER SOLENOID TERM	2	
28		46265	BOOT, RUBBER - STARTER SOLI	2	
29	10	69052	SCREW, STARTER SOLENOID TI	2	
30	13	26992	LOCKWASHER, STARTER SSOLE	2	
31	11	21825	NUT, STARTER SOLENOID SCRE	2	
32		74407	BRACKET, MOUNTING - STARTE	1	
33	10	21140	SCREW, MOUNTING BRACKET T	2	
34	13	26992	LOCKWASHER, MOUNTING BRA	2	
36	11	24656	NUT, MOUNTING BRACKET TO F	1	
--		55642A 7	CONTROL PANEL ASSEMBLY, CC	1	
37		55642A 1	PANEL ASSEMBLY, CONTROL	1	
38	16	55422	STUD, CONTROL PANEL TO BC	4	
39	12	24676	WASHER, CONTROL PANEL S	4	
40	11	27164	NUT, CONTROL PANEL STUD	4	
41		55728A 1	SWITCH, PUSH BUTTON, COM	2	