



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	5523A18	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	16	56295	STUD, DRIVE SHAFT HOUSING	2	
3	22	31704	PLUG, PIPE - DRIVE SHAFT HO	1	
4	19	32652	WELCH PLUG, DRIVE SHAFT H	1	
5	23	32632	BUSHING, DRIVE SHAFT HOUS	1	
6	11	34933	NUT, GEAR HOUSING TO DRIVE	3	
7		54235A 2	COVER ASSEMBLY, WATER POC	1	
8	26	36557	SEAL, RUBBER - WATER POC	1	
9	27	55810	GASKET, WATER POCKET COV	1	
10	10	28668	SCREW, WATER POCKET COV	4	
11	32	54236	TUBE, WATER - WATER POC	1	
12	19	32298	PLUG, TRIM TAB HOLE - DRIVE	1	
14	37	76731A 1	DECAL SET, DRIVE SHAFT HOUS	1	
15	37	77649	DECAL, DRIVE SHAFT HOUSING	1	
15A	37	76398	DECAL, DRIVE SHAFT HOUSING	1	
15B	37	77275	DECAL, DRIVE SHAFT HOUSING	1	
16	10	28634	SCREW, DRIVE SHAFT HOUSING	1	
17	12	20260	WASHER, DRIVE SHAFT HOUSIN	1	
18	26	37259	OIL SEAL, DRIVE SHAFT HOUSIN	1	
19	26	32511	OIL SEAL, GEAR CHAMBER - DRI	1	
20	15	36178A 1	SHIM, BEARING CUP TO DRIVE S	AR	
21	31	35990A 1	ROLLER BEARING ASSEMBLY, P	1	MERCUSIER 898/228
22	43	59832A 2	GEAR ASSEMBLY, COMPLETE (1	1	MERCUSIER 898/228
21	31	66818A 1	ROLLER BEARING ASSEMBLY, P	1	MERCUSIER 250
22	43	66773A 2	GEAR ASSEMBLY, COMPLETE (1	1	MERCUSIER 250
23	45	55796	DRIVE SHAFT, UPPER	1	
24	25	55801	"O" RING, UPPER DRIVE SHAFT	1	
25		76098A 1	COVER ASSEMBLY, TOP - DRIVE	1	
26	31	61100A 1	BEARING ASSEMBLY, DRIVE S	1	
28	15	45691A 1	SHIM, BEARING CUP TO TOP CO	AR	
29	25	32546	"O" RING, TOP COVER SEALING	1	
30	10	58640	SCREW, TOP COVER TO DRIVE	4	
31		59829A 1	UNIVERSAL JOINT ASSEMBLY, C	1	
32		46020	YOKE, UNIVERSAL JOINT - GE	1	
33		39383	SOCKET, CENTER - UNIVERSA	1	
34		75832	CROSS AND BEARING ASSEMBE	2	
35		59830A 1	YOKE ASSEMBLY, UNIVERSAL	1	
36	25	25439	"O" RING, UNIVERSAL JOINT	2	
37		66071	RETAINER, TAPERED ROLLER B	1	
38		35983	RING, ROLLER BEARING RETAIN	1	
39	25	70927	"O" RING, OIL SEAL CARRIER	1	