



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	5356A 3	GEAR HOUSING ASSEMBLY, COM	1	
1	1623	5356A 4	GEAR HOUSING ASSEMBLY	1	
2	17	37972	PIN, SHIFT CRANK - GEAR HO	1	
3	16	46911	STUD, GEAR HOUSING TO D	1	
4	16	56298	STUD, GEAR HOUSING TO D	2	
5	26	45577	SEAL, GEAR HOUSING	1	
6	16	56297	STUD, WATER PUMP BASE A	1	
7	16	69501	STUD, WATER PUMP BASE A	2	
8	17	46912	PIN, DOWEL - GEAR HOUSIN	2	
9	31	35934	BEARING, ROLLER - DRIVE S	1	
10		66884	INSERT, WATER PICKUP (SD)	1	
10		66885	INSERT, WATER PICKUP (ST)	1	
11	10	76156	SCREW, INSERT TO GEAR H	1	
12	11	45812	NUT, INSERT SCREW	1	
13	45	55757A 1	DRIVE SHAFT ASSEMBLY	1	
14	17	30545	PIN, DRIVE SHAFT	1	
15	24	34576	SPRING, COMPRESSION - DF	1	
16	25	30613	"O" RING, UPPER - DRIVE SHA	1	
17	43	61027	GEAR, PINION - DRIVE SHAFT	1	
18	11	35921	NUT, PINION GEAR TO DRIVE	1	
19	15	57007A 1	SHIM, DRIVE SHAFT BEARING	AR	
20	31	53079A 1	TAPERED ROLLER BEARING A	1	
21	27	33146	GASKET, WATER PUMP BASE	1	
22	25	33145	"O" RING, WATER PUMP BASE	1	
23	46	57234A 1	WATER PUMP BASE ASSEMBL	1	
24	26	33144	OIL SEAL, WATER PUMP BASE	1	
25	26	31507	OIL SEAL, WATER PUMP BASE	1	
26	17	35973	DOWEL PIN, WATER PUMP E	2	
27	27	32433	GASKET, LOWER - WATER PUI	1	
28		32435	PLATE, FACE - WATER PUMP E	1	
29	27	32434	GASKET, UPPER - FACE PLATE	1	
30	46	64141A 1	WATER PUMP BODY ASSEMBL	1	
31		48752	INSERT, WATER PUMP BODY	1	
33	26	38970	SEAL, RUBBER - WATER INLI	1	
34	47	65960	IMPELLER, WATER PUMP	1	
35	28	56654	PIN, IMPELLER DRIVE	1	
36	10	30720	SCREW, WATER PUMP BODY	1	
37	12	36001	WASHER, WATER PUMP BODY	1	
38	11	35888	NUT, WATER PUMP BODY STL	2	
39	11	45592	NUT, WATER PUMP BODY STL	1	
40	12	28245	WASHER, WATER PUMP BODY	2	