



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	69864A 1	STARTER MOTOR ASSEMBLY (S	1		
2	16	52387	STUD, STARTER MOTOR	1		
3	13	26992	LOCKWASHER, STARTER MOTO	1		
4	11	20890	NUT, STARTER MOTOR STUD	1		
5		35363	BRACE, STARTER MOTOR	1		
6	10	35765	SCREW, BRACE TO ENGINE (5/8	1		
7	10	34545	SCREW, STARTER MOTOR TO C	1		
7	10	34544	SCREW, STARTER MOTOR TO C	1		
9	11	32219	NUT, STARTER TERMINAL (3/8"	1		
10	13	26995	LOCKWASHER, STARTER TERM	2		
11	11	26419	NUT, STARTER TERMINAL (#8)	2		
12		34625	WATER TEMPERATURE SENDEI	1		
13	13	26996	LOCKWASHER, WATER TEMP.	1		
14	11	20645	NUT, WATER TEMPERATURE	1		
15		34623	OIL PRESSURE SENDER ASSEM	1		
16	13	26996	LOCKWASHER, OIL PRESSURE	1		
17	11	20645	NUT, OIL PRESSURE SENDER	1		
18	22	46932	ELBOW, OIL PRESSURE SENDEF	1		
19	22	73676	NIPPLE, OIL PRESSURE SENDEF	1		
20		69729	ALTERNATOR ASSEMBLY (SEE I	1		
21	10	20055	SCREW, GROUND CABLE TO AL	1		
22	13	26996	LOCKWASHER, GROUND CABLE	1		
23	12	30164	WASHER, GROUND CABLE SCRE	1		
24	12	26991	LOCKWASHER, ALTERNATOR TI	1		
25	11	68531	NUT, ALTERNATOR TERMINAL	1		
26		47498	BRACE, ALTERNATOR ADJUSTI	1		
27	10	29198	SCREW, ALTERNATOR BRACE T	1		
28	12	26168	WASHER, ALTERNATOR BRACE	1		
29	10	27165	SCREW, ALTERNATOR BRACE T	1		
30	13	35048	LOCKWASHER, ALTERNATOR BI	1		
31	12	20553	WASHER, ALTERNATOR BRACE	1		
32		48104	BRACKET, ALTERNATOR MOUN	1		
33	10	76926	SCREW, ALTERNATOR BRACKE	3		
34	13	35048	LOCKWASHER, ALTERNATOR BI	3		
35	10	48308	SCREW, ALTERNATOR TO ALTE	1		
36	23	33186	BUSHING ALTERNATOR TO BRA	1		
37	12	20553	WASHER, ALTERNATOR BRACK	2		
38	11	23161	NUT, ALTERNATOR BRACKET SI	1		