


MERCURY MARINE

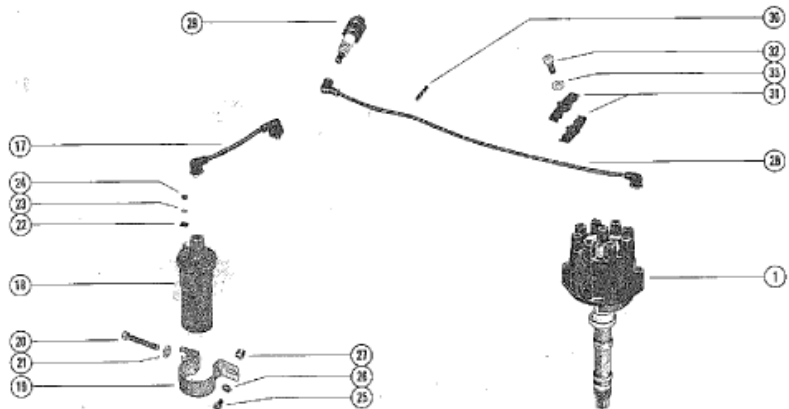

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		64026A	DISTRIBUTOR ASSEMBLY, COMF	1	LEFT HAND CRANKSHAFT ROT.	
1		64026A	DISTRIBUTOR ASSEMBLY, COMF	1	RIGHT HAND CRANKSHAFT RO	
2	393	3230	CAP, DISTRIBUTOR	1		
	37	54675	DECAL, DISTRIBUTOR CAP	1		
3		49924	ROTOR	1		
4	10	36046	SCREW, BREAKER AND COND	3		
5	81	64851	CONDENSER	1		
6		64850	BREAKER ASSEMBLY	1		
7	84	64846	LEAD ASSEMBLY, PRIMARY TE	1		
8	54	60048A	CLAMP ASSEMBLY, DISTRIBUT	2		
9		54205	BUMPER, CLAMP	2		
10	10	21335	SCREW, CLAMP TO DISTRIB	2		
11	13	26996	LOCKWASHER, DISTRIBUTOR	2		
12	43	64907	GEAR, DRIVE (LEFT HAND CRA	1		
12	43	64908	GEAR, DRIVE (RIGHT HAND CF	1		
13	17	58021	PIN, DRIVE GEAR	1		
14	27	58025	"O" RING, DISTRIBUTOR	1		4
15		58258	CLAMP, DISTRIBUTOR TO INTAK	1		
16	10	29198	SCREW, DISTRIBUTOR CLAMP A	1		
17	84	65796	LEAD ASSEMBLY, DISTRIBUTOR	1		
18		26433	COIL, IGNITION	1		
19		33321	BRACKET, IGNITION COIL MOUN	1		
20	10	33311	SCREW, BRACKET TO IGNITION	1		
21	13	35048	LOCKWASHER, BRACKET SCREW	1		
22	12	30164	WASHER, IGNITION COIL TERMIN	2		
23	13	26996	LOCKWASHER, IGNITION COIL T	2		
24	11	20645	NUT, IGNITION COIL TERMINAL	2		
25	10	34613	SCREW, IGNITION COIL ATTACH	1		
26	12	20553	WASHER, IGNITION COIL ATTAC	1		
27	23	60339	SPACER, IGNITION COIL ATTACH	1		
25	10	26332	SCREW, IGNITION COIL ATTACH	1		
26	12	20553	WASHER, IGNITION COIL ATTAC	1		
27	23	36534	SPACER, IGNITION COIL ATTACH	1		
28	84	65795	LEAD ASSEMBLY, HIGH TENSION	1	SERIAL 00000000-03838787	
28	84	65795	LEAD ASSEMBLY, HIGH TENSION	1	SERIAL 00000000-03838787	
28	84	65795	LEAD ASSEMBLY, HIGH TENSION	1	SERIAL 00000000-03838787	
28	84	65795	LEAD ASSEMBLY, HIGH TENSION	1	SERIAL 00000000-03838787	
28	84	65795	LEAD ASSEMBLY, HIGH TENSION	2	SERIAL 00000000-03838787	
28	84	65795	LEAD ASSEMBLY, HIGH TENSION	2	SERIAL 00000000-03838787	
28	84	67957	LEAD ASSEMBLY, HIGH TENSION	1	SERIAL 03838788-09999999	
28	84	67957	LEAD ASSEMBLY, HIGH TENSION	1	SERIAL 03838788-09999999	