



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
		62767A 7	TRANSMISSIONASSEMBLY COM	1	B62767A7 TRANSMISSION ASSEMI	
1		62767A 4	HOUSING ASSEMBLY, TRANSMI	1		
3			PIN, SPRING-TRANSMISSION HOU	1		1
4	22	47902	VENT, TRANSMISSION HOUSI	1		
5		64090A 1	TUBE ASSEMBLY, DIPSTICK	1		
6		63037	DIPSTICK, OIL LEVEL GAUGE	1		
7			BALL, TRANSMISSION HOUSI	1		1
8	22	36373	PLUG, PIPE-TRANSMISSION HI	1		
8A	10	47462	SCREW, TRANSMISSION HOUSI	6	NOT INCLUDED WITH TRANSM	
8B	13	32993	LOCKWASH, TRANSMISSION F	6	NOT INCLUDED WITH TRANSM	
9			"O"RING, PUMP TO TRANSMISS	2	2	
10			"O"RING, PUMP TO TRANSMISS	2	2	
11			"O"RING, PUMP TO TRANSMISSI	1	2	
12		62718A 2	PUMP ASSEMBLY	1		
13			SEAL, PUMP COVER	1	2	
14	22	20025	PLUG, PUMP	2		
15		62722	PISTON,RELIEF VALVE	1		
16	24	62790	SPRING, FELIEF VALVE PISTON	1		
17			"O" RING, PUMP PLUG (3/4 O.D.)	2	2	
18	19	62753	PLUG, PUMP	2		
19	10	35386	SCREW,PUMP TO TRANSMISS	5		
19	10	31984	SCREW, PUMP TO TRANSMISS	2		
20			WASHER, SEALING-PUMP SCRE	7	2	
21			"O" RING, PUMP (3 7/16" O.D.)	1	2	
22		62662	PUMP,GREOTOR	1		
23	10	60300	SCREW, PUMP ATTACHING (3/	7		
24	13	26992	LOCKWASHER,PUMP SCREW	7		
25		63126	FLANGE ASSEMBLY, OIL COOL	1		
26	10	66137	SCREW,FLANGE TO TRANSMI	1		
27	13	26992	LOCKWASHER, FLANGE SCRE	1		
28			"O"RING, FLANGE TO TRANSMI	1	2	
29		66515A 1	COVER ASSEMBLY, OIL COOLE	1		
30	27	62724	GASKET,OIL COOLER COVER	1		
31	22	36373	PLUG, PIPE-COVER	1		
32	11	21612	NUT, JAM-OIL COOLER	2		
33			"O" RING, OIL COOLER JAM	2	2	
34	10	60300	SCREW, COVER TO TANSMISS	4		
35	13	26992	LOCKWASHER,COVER SCREW	4		
36		62740A 2	CONTROL VALVE ASSEMBLY	1		
37			BALL,CONTROL VALVE (1/4")	1	1	
38	22	28072	PLUG, CONTROL VALVE	1		