



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62285	BRACKET, MOUNTING (REAR)	2		
2	10	47462	SCREW, MOUNTING BRACKET T	6		
3	13	32993	LOCKWASHER, MOUNTING BRA	6		
4		61815	BRACKET, MOUNTING (FRONT)	2		
5	10	47724	SCREW, MOUNTING BRACKET T	6		
6	13	32993	LOCKWASHER, MOUNTING BRA	6		
7	10	47654	SCREW, CLAMP-ADJUSTING TRI	4		
8	13	32993	LOCKWASHER, CLAMP ADJUSTI	4		
9	54	47528	CLAMP, ADJUSTING TRUNNION	8		
10	11	29553	NUT, CLAMP ADJUSTING TRUNN	4		
11	14	48467	TAB WASHER, ADJUSTING TRUI	4		
12		52139A 2	BRACKET ASSEMBLY, MOUNTIN	4		
13	12	48611	WASHER, MOUNTING BRACKE	8		
14		47656	MOUNT, MOUNTING BRACKET	8		
15	10	52156	SCREW, ADJSUTING TRUNNION	4		
16		47518	TRUNNION, ADJUSTING-MOUNT	4		
17	11	47525	NUT, JAM-ADJUSTING TRUNNIO	4		
18	17	22116	PIN,ROLL-JAM NUT	4		
19		62255	BRACKET, MOUNTING-ENGINE	4		
--	27	65577	GASKET, CARBURETOR	2		
--	16	29208	STUD, CARBURETOR MOUNTINI	2		
--	16	30669	STUD, CARBURETOR MOUNTINI	2		
--		55241	GUAGE, OIL LEVEL(DIPSTICK)	1		
--		60212A 1	EXHAUST ELBOW RISER	2		
--	16	49545	STUD, EXHAUST ELBOW TO R	8		
--	22	32802	PLUG, EXHAUST ELBOW RISEI	2		
--	22	36305	ELBOW, EXHAUST RISER	2		
--	16	60607	STUD, MANIFOLD TO RISER (2 I	4		
--	11	48383	NUT, RISER TO EXHASUT ELBO	8		
--	13	37459	LOCKWASHER, RISER TO EXHAI	8		
--	27	52076	GASKET, ELBOW TO RISER	6		