



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1396	5169	CARBURETOR ASSEMBLY, COM	1	
58	1396	4087	TUBE, METERING BODY CONN	1	
59			"O" RING, CONNECTING TUBE	2	3
60	1396	5163	FUEL BOWL ASSEMBLY, PRIM	1	
61	1396	4126	SCREW, PRIMARY FUEL BOWL	4	
62			GASKET, FUEL BOWL SCREW	8	3
63	1396	5159	FITTING, FUEL INLET	1	
64			GASKET, FUEL INLET FITTING	1	3
65	1396	4097	COVER, FUEL PUMP	1	
66			DIAPHRAGM ASSEMBLY, PRIM	1	4
67	1396	4103	SPRING, DIAPHRAGM RETURN	1	
68	1396	4644	SCREW, FUEL PUMP COVER A	4	
69	1396	4088	FLOAT ASSEMBLY	2	
70			RETAINER, FLOAT	2	4
71	1396	4104	SPRING, FLOAT	2	
72	1396	4344	PLUG, CHECK - FUEL LEVEL	2	
73			GASKET, FUEL LEVEL CHECK F	2	3
74	1396	4152	BAFFLE, FUEL BOWL - PRIMAR	1	
75			GASKET, FUEL BOWL	1	3
76	1396	4151	BAFFLE, PRIMARY METERING	1	
77	1396	5164	METERING BODY, PRIMARY	1	
78	1396	5160	MAIN JET	2	
79			GASKET, PRIMARY METERING	1	3
80			POWER VALVE ASSEMBLY	1	4
81			GASKET, POWER VALVE	1	3
82			NEEDLE, IDLE ADJUSTING	2	4
83			SEAL, IDLE ADJUSTING NEEDL	2	3
84	1396	5162	FUEL BOWL ASSEMBLY, SECO	1	
85	1396	4134	SCREW, SECONDARY FUEL BC	4	
86	1396	5161	METERING BODY, SECONDAR	1	
87	1396	4136	SCREW, SECONDARY METERI	6	
88			GASKET, SECONDARY METERI	1	3
89	1396	4095	PLATE, SECONDARY METERIN	1	
90			GASKET, SECONDARY METER	1	3
91	1396	4137	SCREW, LOCKING - FUEL VALV	2	
92			GASKET, VAVLE SEAT LOCKINI	2	3
93	1396	4140	NUT, ADJUSTING - FUEL VALV	2	
94			GASKET, VALVE SEAT ADJUST	2	3
95			FUEL VALVE ASSEMBLY	2	4
96			"O" RING, FUEL VALVE	2	3
97	1396	4152	BAFFLE, FUEL BOWL, SECON	1	