



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		60953	TRANSMISSION, V-DRIVE(DIRECT C	1		
1		60588	TRANSMISSION, V-DRIVE(1.51:1	1		
1		60954	TRANSMISSION,V-DRIVE(1.99:1 REI	1		
1		60955	TRANSMISSION, V-DRIVE(2.49:1 R	1		
1		60956	TRANSMISSION, V-DRIVE(3.14:1 R	1		
2	10	47724	SCREW, TRANSMISSION TO ENI	6		
3	13	32993	LOCKWASHER, TRANSMISSION S	6		
4	22	63824	ELBOW, HOSE TO TRANSMISSI	1		
5	32	47516 9	HOSE, OIL COOLER TO TRANSM	1		
6		47613	SWITCH,NEUTRAL SAFETY	1		
7		48386A 1	FLANGE ASSEMBLY(1")	OPT		
7		48387A 1	FLANGE ASSEMBLY (1 1/8")	OPT		
7		48388A 1	FLANGE ASSEMBLY (1 1/4")	OPT		
7		48389A 1	FLANGE ASSEMBLY(1 3/8")	OPT		
7		48390A 1	FLANGE ASSEMBLY (1 1/2")	OPT		
7		57295A 1	FLANGE ASSEMBLY (1 3/4")	OPT		
7		57296A 1	FLANGE ASSEMBLY (2")	OPT		
8	10	60171	SCREW, FLANGE TO PROPELL	2	SEE NOTE	
8	10	60170	SCREW, FLANGE TO PROPELL	2	SEE NOTE	
8	10	60169	SCREW, FLANGE TO PROPELL	2	SEE NOTE	
9	10	60106	SCREW, TRANSMISSION FLAN	4		
10	13	32993	LOCKWASHER, FLANGE SCRE	4		
11	11	22024	NUT, FLANGE SCREW	4		
12		63815A 1	BRACKET, SHIFT CABLE	1		
13	10	22469	SCREW, BRACKET TO TRASMIS:	2		
14	13	26992	LOCKWASHER, BRACKEET TO T	2		
15	12	37407	WASHER, SHIFT CABLE TO BRAI	1		
16	11	46438	NUT, SHIFT CABLE TO BRACEKT	1		
17	22	47629	ELBOW, HOSE TO TRANSMISSIC	1		
18	32	47516 10	HOSE, TRANSMISSION TO OIL C	1		
19	22	47629	ELBOW, HOSE TO OIL COOLER (	2		
20		48515	LEVER, SHIFT-TRANSMISSION	1		
21	12	20722	WASHER, SHIFT LEVER TO TRA	1		
22	13	26993	LOCKWASHER, SHIFT LEVER TC	1		
23	11	20083	NUT, SHIFT LEVER TO TRANSMI	1		
24		48652	ADAPTOR, SHIFT BAVLE TO SHII	1		
25	16	48680	STUD, SHIFT CALBE ADAPTOR T	1		
26	12	20533	WASHER, SHIFT CABLE ADAPTC	1		
27	11	46887	NUT, SHIFT CABLE ADAPTOR ST	1		
28	13	29402	WAVE WASHER, SHIFT CABLE A	1		
29	12	27407	WASHER, SHIFT CABLE ADAPTC	1		