



84-94227A2
 Resistance Wire Kit

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	64600	WIRING HARNESS	1	SERIAL 00000000-03259127	
1	84	64635	WIRING HARNESS	1	SERIAL 03603978-09999999	
2		26079	PLATE, WIRING HARNESS PLAT	1		
4		54227	BRACKET, MOUNTING - ELECTR	1	SERIAL 03603978-09999999	
5	10	21077	SCREW, MOUNTING BRACKET A	2	SERIAL 00000000-03259127	
6	13	35048	LOCKWASHER, MOUNTING BRA	2	SERIAL 03259127-09999999	
7		25661	STARTER SOLENOID	1	SERIAL 03259127-09999999	
8	10	28063	SCREW, STARTER SOLENOID TI	2		
9	13	26992	LOCKWASHER, STARTER SOLEI	2		
10	13	26996	LOCKWASHER, STARTER SOLEI	2		
11	11	20645	NUT, STARTER SOLENOID TERM	2		
12	13	26993	LOCKWASHER, STARTER SOLEI	2		
13	11	20083	NUT, STARTER SOLENOID TERM	2		
15		59816	CIRCUIT BREAKER	1		
16	10	36046	SCREW< WIRING HARNESS LE	2		
17	10	47618	SCREW, CIRCUIT BREAKER TO	2		
18	25	61999	GROMMET, CIRCUIT BREAKER	4		
19	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
20	12	47960	WASHER, CIRCUIT BREAKER SC	4		
21	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
22	54	37304	CLAMP, HARNESS TO MOUNTIN	1	SERIAL 33259127-09999999	
23	10	20031	SCREW, CLAMP TO MOUNTING	1	SERIAL 33259127-09999999	
24	13	26992	LOCKWASHER, CLAMP TO MOUT	1	SERIAL 33259127-09999999	
25		61969	BRACKET, CIRCUIT BREAKER	1	SERIAL 33259127-09999999	
26	10	47194	SCREW, CIRCUIT BREAKER BRA	2	SERIAL 33259127-09999999	
27	13	26996	LOCKWASHER, BRACKET SCRE	2	SERIAL 33259127-09999999	