



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	76965A 3	STARTER MOTOR ASS'Y(DELCO	1		
1	50	79604A 3	STARTER MOTOR ASS'Y(DELCO	1		
2	10	47462	SCREW, STARTER MOTOR TO C	2		
3	13	32993	LOCKWASHER, STARTER MOTO	2		
4	11	32219	NUT, STARTER TERMINAL (3/8"	1		
5	13	26395	LOCKWASHER, STARTER TERM	2		
6	11	26419	NUT, STARTER TERMINAL (#8)	2		
7		34625	WATER TEMPERATURE SENDEI	1		
8	13	26396	LOCKWASHER, WATER TEMPE	1		
9	11	68219	NUT, WATER TEMPERATURE	1		
10		34623	OIL PRESSURE SENDER ASSEM	1		
11	13	26396	LOCKWASHER, OIL PRESSURE	1		
12	11	68219	NUT, OIL PRESSURE SENDER	1		
13	22	46932	ELBOW, OIL PRESSURE SENDE	1		
14	22	38992	NIPPLE, OIL PRESSURE SENDE	1		
15		78403A 1	ALTERNATOR ASSEMBLY(MOTO	1		
16	13	26396	LOCKWASHER, ALTERNATOR TI	1		
16	13	26392	LOCKWASHER, ALTERNATOR TI	1		
17	11	30968	NUT, ALTERNATOR TERMINAL (1		
17	11	20890	NUT, ALTERNATOR TERMINAL (1		
18		85013	BRACE, ALTERNATOR ADJUSTI	1		
19	10	29198	SCREW, ALTERNATOR BRACE T	1		
20	13	39107	LOCKWASHER, ALTERNATOR BI	1		
21	12	26168	WASHER, ALTERNATOR BRACE	1		
22	10	27165	SCREW, ALTERNATOR BRACE T	1		
23	13	35048	LOCKWASHER, ALTERNATOR BI	1		
24	12	20553	WASHER, ALTERNATOR BRACE	1		
25		48104	BRACKET, ALTERNATOR MOUN	1		
26	10	76326	SCREW, ALTERNATOR BRACKE	3		
27	13	35048	LOCKWASHER, ALTERNATOR BI	3		
28	10	48308	SCREW, ALTERNATOR TO ALTE	1		
29	23	33186	BUSHING, ALTERNATOR TO BR	1		
30	12	20553	WASHER, ALTERNATOR BRACK	2		
31	11	23161	NUT, ALTERNATOR BRACKET SI	1		