



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		66417	BRACKET, MOUNTING - TRANSMISSION	2			
2	10	37269	SCREW, BRACKET TO TRANSMISSION	4			
3	13	32993	LOCKWASHER, BRACKET SCREW	4			
4	10	57357	SCREW, CLAMPING - MOUNTING	2			
5	13	32993	LOCKWASHER, CLAMPING SCREW	2			
6	11	29553	NUT, CLAMPING SCREW	2			
7		71128	BRACKET, MOUNTING - ENGINE	2			
8	10	37612	SCREW, MOUNTING BRACKET TO	4			
9	13	35048	LOCKWASHER, MOUNTING BRACKET	4			
8	10	48424	SCREW, MOUNTING BRACKET TO	2			
9	13	35048	LOCKWASHER, MOUNTING BRACKET	2			
10	10	37269	SCREW, CLAMPING - MOUNTING	2			
11	13	32993	LOCKWASHER, CLAMPING SCREW	2			
12	11	29553	NUT, CLAMPING SCREW	2			
13		66166	TRUNNION, ADJUSTING - MOUNTING	4			
14	13	68102	LOCKWASHER, MOUNTING BRACKET	4			
15		66284	BASE, ENGINE MOUNTING	4			
16	11	20739	NUT, JAM - ENGINE MOUNTING BASE	8			
17	14	66658	TAB WASHER, BASE NUT	2			