



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	70959A 2	WIRING HARNESS (FUSED ENGI	1		
1	84	86677A 2	WIRING HARNESS (NON FUSED	1		
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		87090	BRACKET, MOUNTING - HARNE	1		
5	10	47461	SCREW, MOUNTING BRACKET A	2		
6	13	32993	LOCKWASHER, MOUNTING BRA	2		
7		64884	TAB, WIRING HARNESS (USED	1		
7	54	55098	"J" CLIP (USED WITH B-84-86	1		
8	89	68258	STARTER SOLENOID	1		
9	10	69054	SCREW, STARTER SOLENOID TI	2		
10	13	26992	LOCKWASHER, STARTER SOLEI	2		
11	13	26996	LOCKWASHER, STARTER SOLEI	2		
12	11	68219	NUT, STARTER SOLENOID TERM	2		
13	13	26993	LOCKWASHER, STARTER SOLEI	2		
14	11	68292	NUT, STARTER SOLENOID TERM	2		
15	88	78813	CIRCUIT BREAKER	1		
--	11	68219	NUT, CIRCUIT BREAKER TERM	2		
--	13	26996	LOCKWASHER, CIRCUIT BREA	2		
16	10	24637	SCREW, CIRCUIT BREAKER TO E	2		
17	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
18	54	73668	"J" CLIP, WIRING HARNESS - MA	1		
18	54	54178	"J" CLIP, WIRING HARNESS - TE	1		
19	10	25703	SCREW, "J" CLIP ATTACHING (1,	1		
20	84	78581A 3	HARNES ASSEMBLY, ALTERNA	1	- USED WITH FUSED ENGINES	
21		57908 2	SLEEVE, ALTERNATOR HARNE	2	- USED WITH FUSED ENGINES	
22	88	79023A90	FUSE ASSEMBLY, SOLENOID	1	- USED WITH FUSED ENGINES	
23	85	79695	INSULATOR BOOT, HARNESS LE	1	- USED WITH FUSED ENGINES	
24	13	24669	LOCKWASHER, LEAD TO FUSE S	1	- USED WITH FUSED ENGINES	
25	11	21825	NUT, LEAD TO FUSE STUD	1	- USED WITH FUSED ENGINES	
26	84	79139A 7	WIRING ASSEMBLY, FUSE TO CI	1	- USED WITH FUSED ENGINES	