



1402

Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1641	4855A13	GEAR HOUSING ASSY, COMPLE	1	
-	1641	4855A14	GEAR HOUSING ASSY, COMPLE	1	
1	1641	4855A 6	GEAR HOUSING ASSEMBLY	1	
2	16	57982	STUD, GEAR HOUSING (1-7/8	1	
3	31	35246	ROLLER BEARING, DRIVE SH	1	
4	10	28634	SCREW, VENT - GEAR HOUSIN	1	
5	12	20260	WASHER, SEAL - VENT SCREW	1	
6	43	62880	PINION GEAR	1	
7	12	54048	WASHER, PINION GEAR TO DF	1	
8	11	55819	NUT, PINION GEAR TO DRIVE :	1	
9	45	62783	DRIVE SHAFT	1	
10	15	26320A 1	SHIM ASSY, ROLLER BEARING	AR	
11	31	48941A 1	TAPERED ROLLER BEARING A	1	
12	31	35990A 1	TAPERED ROLLER BEARING A	1	
13	25	54030	"O" RING, GEAR HOUSING	1	
14		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1	
15	10	49354	SCREW, TRIM TAB TO GEAR H	1	
16	15	55499A 1	SHIM ASSY, ROLLER BEARING	AR	LEFT HAND ROTATION
17	31	54038A 1	TAPERED ROLLER BEARING A	1	LEFT HAND ROTATION
18	44	62820	PROPELLER SHAFT	1	LEFT HAND ROTATION
19	31	54036A 1	TAPERED ROLLER BEARING A	1	LEFT HAND ROTATION
16	15	47397A 1	SHIM ASSY, ROLLER BEARING	AR	RIGHT HAND ROTATION
17	31	62801A 1	TAPERED ROLLER BEARING A	1	RIGHT HAND ROTATION
18	44	62792	PROPELLER SHAFT	1	RIGHT HAND ROTATION
19	31	62799A 1	TAPERED ROLLER BEARING A	1	RIGHT HAND ROTATION
20	43	62881	DRIVE GEAR	1	
21		66103A 1	THRUST RING ASSEMBLY	1	
22	23	66093	LOAD RING, THRUST RING	1	
23	25	34821	"O" RING, BEARING CARRIER	1	
24		62813A 1	BEARING CARRIER ASSEMBLY	1	
25	31	54042	ROLLER BEARING, BEARING	1	
26	26	54926	OIL SEAL, BEARING CARRIER	2	
27	28	30281	KEY, LOCATING - BEARING CA	1	
28	14	54167	TAB WASHER, GEAR HOUSING	1	
29		54163	COVER, GEAR HOUSING	1	
30		55074	THRUST HUB	1	
31	12	55073A 1	WASHER ASSEMBLY, SPLINED -	1	
32	12	55072	THRUST WASHER, BEARING C	1	
33	14	34817	TAB WASHER, PROPELLER NUT	1	
34	11	54034	NUT, PROPELLER (1-1/4-7 THRE	1	
25	25	54029	"O" RING, GEAR HOUSING	1	