



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1571	4847A 5	DRIVE SHAFT HOUSING ASSEM	1		
2	10	21934	SCREW, SET - DRIVE SHAFT H	1		
3	26	62818	OIL SEAL, DRIVE SHAFT HOUS	1		
4	25	62817	"O" RING, DRIVE SHAFT HOUS	1		
5	27	54014	GASKET, DRIVE SHAFT HOUSI	1		
6	16	54674	STUD, DRIVE SHAFT HOUSING	6		
7	11	34933	NUT, DRIVE SHAFT HOUSING S	6		
8	19	47579	PLUG, TRIM TAB HOLE - DRIVE	1		
9	10	28634	SCREW, VENT - DRIVE SHAFT H	1		
10	12	20260	WASHER, SEALING - VENT SCRE	1		
11	24	48442	SPRING, TENSION - OIL RELEAS	1		
12	20	48219	CHECK VALVE, OIL RELEASE	1		
13	25	48452	QUAD RING, OIL RELEASE CHEC	1		
14	27	66925	GASKET, CHECK VALVE GUIDE	1		
15		54168	GUIDE, CHECK VALVE	1		
16	10	22523	SCREW, CHECK VALVE GUIDE T	3		
17	31	38356A 1	TAPERED ROLLER BEARING AS:	1		
18	12	62795	TAB WASHER, DRIVE SHAFT	1		
19	13	62788	LOCKWASHER, DRIVE SHAFT	1		
20	11	62794	NUT, DRIVE SHAFT	1		
21		62787A 1	COUPLING ASSEMBLY, OIL SLINI	1		8
22	15	39899A 1	SHIM ASSEMBLY, ROLLER BEAR	AR		8
23	12	62797	WASHER, ROLLER BEARING TO	1		8
24	15	32061A 1	SHIM ASSEMBLY, TAPERED ROL	AR		
25	31	62799A 1	TAPERED ROLLER BEARING AS:	1		
26	43	62879	GEAR, DRIVEN - DRIVE SHAFT	1		
27	45	62793	DRIVE SHAFT	1		
28	25	67202	"O" RING, TOP COVER	1		
29		62911	COVER, TOP	1		
30	10	35047	SCREW, COVER TO DRIVE SHAF	4		
31		62782A 1	UNIVERSAL JOINT ASSEMBLY, F	1	SERIAL 00000000-04345438	
31		62782A 2	UNIVERSAL JOINT ASSEMBLY, F	1	SERIAL 04345439-09999999	
32		62782	YOKE, UNIVERSAL JOINT (GEAF	1		
33		58749	CROSS AND BEARING ASSEME	2	SERIAL 00000000-04345438	
33		75832	CROSS AND BEARING ASSEME	2	SERIAL 04345439-09999999	
34		39383	SOCKET, CENTER - UNIVERSA	1		
35		62784	YOKE, UNIVERSAL JOINT (COU	1		
36	24	62727	SPRING COMPRESSION - UNIV	1		
37	15	62833A 1	SHIM ASSY, ROLLER BEARING	AR		
38	31	38356A 1	TAPERED ROLLER BEARING AS:	1		
39	22	62789	SPACER, TAPERED ROLLER BE:	1		