



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY (E	1		
2	25	21720	"O" RING, HYDRAULIC PUMP T	4		
3	10	46918	SCREW, VENT - HYDRAULIC PI	1		
4	13	46917	LOCKWASHER, SEALING - VEN	1		
5	10	28634	SCREW, FILTER - HYDRAULIC	1		
6	12	20260	WASHER, SEALING - HYDRARL	1		
7		48077A 3	CONTROL VALVE ASSEMBLY	1		
-	25	21720	"O" RING, HYDRAULIC PUMP T	4		
8	22	52666	ELBOW, CONTROL VALVE	1		
9	10	21091	SCREW, CONTROL VALVE TO H	4		
10	13	26992	LOCKWASHER, CONTROL VALVE	4		
--		55642A 7	CONTROL PANEL ASSIMBLY, CO	1		
12		55642A 1	PANEL ASSIMBLY, CONTROL	1		
13	16	55422	STUD, CONTROL PANEL TO BC	4		
14	12	24676	WASHER, CONTROL PANEL ST	4		
15	11	27164	NUT, CONTROL PANEL STUD	4		
16		55738A 1	SWITCH, PUSH BUTTON - CON	3		
17		48078	JUMPER WIRE, PUSH BUTTON	1		
17		53107	JUMPER WIRE, PUSH BUTTON	1		
18		55641	RETAINER, PUSH BUTTON SW	1		
19	10	62568	SCREW, SWITCH RETAINER T	1		
20		45341 20	HARNES, CONTROL PANEL	1		
21		33865	BINDER, NYLON - CONTROL P	1		
22	54	46770	CLAMP, HARNES ATTACHING	1		
23	10	29227	SCREW, HARNES ATTACHING	1		
24	11	34388	NUT, HARNES ATTACHING CI	1		
25		58397A 3	BRACKET ASSEMBLY, MOUNTIN	1		
26		58491	BUMPER, RUBBER - PUMP MD	2		
27	10	59784	SCREW, PUMP MOUNTING BR	6		
28	12	29245	WASHER, PUMP MOUNTING B	6		
29	10	24234	SCREW, HYDRAULIC PUMP TC	4		
30	13	39107	LOCKWASHER, HYDRAULIC PL	4		
31	23	36534	SPACER, MOUNTING BRACKET	4		
32	11	21908	NUT, HYDRAULIC PUMP SCRE	4		
33		45325	CONNECTOR AND HARNES	1	SERIAL 00000000-04644909	
33	84	74023	CONNECTOR AND HARNES	1	SERIAL 04644910-09999999	
34		45559	TERMINAL BLOCK, HYDRAULIC	2	SERIAL 00000000-04644909	
35	10	35519	SCREW, TERMINAL BLOCK TO H	2	SERIAL 00000000-04644909	
36	10	62568	SCREW, HARNES LEADS TO TI	2	SERIAL 00000000-04644909	
37		55390	JUMPER WIRE, SOLENOID TO TI	1	SERIAL 00000000-04644909	
38		55991	JUMPER WIRE, SOLENOID TO TI	1		