



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
		55642A13	CONTROL PANEL ASSEMBLY, CC	1		
1		55642A	PANEL ASSEMBLY, CONTROL	1		
2	16	55422	STUD, CONTROL PANEL TO BC	4		
3	12	24676	WASHER, CONTROL PANEL ST	4		
4	11	27164	NUT, CONTROL PANEL STUD	4		
5		55738A	SWITCH, PUSH BUTTON-CONT	3		
6		48078	JUMPER WIRE (RED-3 1/4")-US	1		
7	84	69174A	WIRE (RED-24")	2		
8	88	69358A	CAP ASSEMBLY, FUSE HOLDER	1		
9	88	79091	FUSE (20 AMP)	1		
10		53107	JUMPER WIRE (PURPLE-3")	1		
11		55641	RETAINER, PUSH BUTTON SW	1		
12	10	62568	SCREW, SWITCH RETAINER T	4		
13	84	87394A20	HARNESS, CONTROL PANEL	1		
14		33865	BINDER, NYLON-CONTROL PAI	1		
15	54	46770	CLAMP, HARNESS ATTACHING	1		
16	10	29227	SCREW, HARNESS ATTACHING	1		
17	11	34388	NUT, HARNESS ATTACHING CI	1		
18		52752	JUMPER WIRE, STARTER SOLEI	1		
19		45551	BATTERY LEAD (POSITIVE) 18" L	OPT.		
19		45552	BATTERY LEAD (NEGATIVE) 18" L	OPT.		
19	84	79139A	BATTERY LEAD (POSITIVE) 72" L	OPT.		
19	84	79138A	BATTERY LEAD (NEGATIVE) 72" L	OPT.		
20	84	93542A	WIRING HARNESS, HYDRAULIC	1		
21	84	74023A	CONNECTOR AND HARNESS (US	1		
21	84	79147A	CONNECTOR AND HARNESS (US	1		
22		45559	TERMINAL BLOCK, HYDRAULIC	1		
23	10	35519	SCREW, TERMINAL BLOCK TO H	1		
24	10	48409	SCREW, HARNESS LEADS TO TI	2		
25	89	68258	STARTER SOLENOID	1		
26	13	26996	LOCKWASHER, STARTER SOLEI	2		
27	11	68219	NUT, STARTER SOLENOID TERN	2		
28	13	26993	LOCKWASHER, STARTER SOLEI	2		
29	11	68292	NUT, STARTER SOLENOID TERN	2		
30		46265	BOOT, RUBBER-STARTER SOLE	2		
31	10	69052	SCREW, STARTER SOLENOID TI	2		
32	13	26992	LOCKWASHER, STARTER SOLEI	2		
33	11	21825	NUT, STARTER SOLENOID SCRE	2		
34		74407	BRACKET, MOUNTING-STARTEF	1		
35	10	21140	SCREW, MOUNTING BRACKET T	2		
36	13	26992	LOCKWASHER, MOUNTING BRACKET	2		