



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	1547	5523A18	DRIVE SHAFT HOUSING ASSEMBLY	1			
2	16	56295	STUD, DRIVE SHAFT HOUSING	2			
3	22	31704	PLUG, PIPE - DRIVE SHAFT HO	1			
4	19	32652	WELCH PLUG, DRIVE SHAFT H	1			
5	23	32632	BUSHING, DRIVE SHAFT HOUS	1			
6	11	34933	NUT, GEAR HOUSING TO DRIVE	3			
7	19	32298	PLUG, TRIM TAB HOLE (13/32" D	OPT.			
7	19	47579	PLUG, TRIM TAB HOLE (1/2" DIA	OPT.			
8	10	79953	SCREW, DRIVE SHAFT HOUSING	1			
9	12	20260	WASHER, DRIVE SHAFT HOUSING	1			
10		58858A	UNIVERSAL JOINT ASSEMBLY, C	1			
10		59829A	UNIVERSAL JOINT ASSEMBLY, C	1			
11		46020	YOKE, UNIVERSAL JOINT - GEAR	1			
12		39383	SOCKET, CENTER - UNIVERSAL	1			
13		75832	CROSS AND BEARING ASSEMBLY	2			
14		39385A	YOKE ASSEMBLY, UNIVERSAL	1			
14		59830A	YOKE ASSEMBLY, UNIVERSAL	1			
15	25	25439	"O" RING, UNIVERSAL JOINT	2			15
16		66071	RETAINER, TAPERED ROLLER	1			
17		35983	RING, ROLLER BEARING RETAIN	1			
18	25	70937	"O" RING, OIL SEAL CARRIER	1			17
19		66081A	CARRIER ASSEMBLY, OIL SEAL	1			
20	26	68493	OIL SEAL, CARRIER	1			17
21	31	35988A	ROLLER BEARING ASSEMBLY, D	1			
22	23	35985	SPACER, ROLLER BEARING CUP	1			
23	15	35980A	SHIM, BEARING CUP TO DRIVE S	AP			
24	15	71013	SHIM, BEARING CUP TO DRIVE S	1			
25	43	55766A	GEAR ASSEMBLY, COMPLETE (1.	1			
25	43	55765A	GEAR ASSEMBLY, COMPLETE (1.	1			
25	43	75324A	GEAR ASSEMBLY, COMPLETE (1.	1			
25	43	59832A	GEAR ASSEMBLY, COMPLETE (1.	1			
26	31	35990A	ROLLER BEARING ASSEMBLY, P	1			
27	12	45810	WASHER, DRIVE GEAR TO UNIV	1			
28	11	22339	NUT, DRIVE GEAR TO UNIVERS	1			