



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	8951A 2	GEAR HOUSING ASSEMBLY, COM	1		
1	1623	5356A 4	GEAR HOUSING ASSEMBLY	1		
53	18	89212	COTTER PIN, CLUTCH ACTUAT	1		22
54		N.S.S.	SLEEVE, ADJUSTING (REPLAC	1		22
55		N.S.S.	RETAINER, SPRING (REPLACE	1		22
56		N.S.S.	WASHER (REPLACED BY 1975	2		22
57		N.S.S.	SPRING (REPLACED BY 1975	1		22
58		N.S.S.	SPOOL (REPLACED BY 1975	1		22
59		N.S.S.	SHAFT (REPLACED BY 1975	1		22
60		76865	SHIFT CRANK	1		
61	15	47397A 1	SHIM	AR		22
62		N.S.S.	FORWARD GEAR (PART OF 43	1		22
63	31	30895	ROLLER BEARING	1		22
64	31	35928A 1	TAPERED ROLLER BEARING A	1		22
65	52	66063	CLUTCH	1		
66	17	30632	CROSS PIN	1		
67	24	30893	SPRING, RETAINER-CROSS PI	1		
68	44	66060	PROPELLER SHAFT	1		
69		N.S.S.	REVERSE GEAR	1		22
70		35915	THRUST RING, BEARING CAR	1		22
71	30	88957A 1	BALL BEARING, REVERSE GE	1		22
72	15	97166	SHIM	1		22
73	25	31534	O RING, BEARING CARRIER	1		15,22
74		73020A14	BEARING CARRIER ASSEMBLY	1		
75	31	30956	ROLLER BEARING	1		
76	26	76868	OIL SEAL	2		15,22
77	28	30281	KEY	1		
78	14	79447	TAB WASHER, GEAR HOUSING	1		
79		79448	COVER, GEAR HOUSING	1		
80		56292A 2	THRUST HUB AND WASHER AS	1		
81	12	35965	WASHER, CUPPED	1		
82	12	31211A 2	WASHER, SPLINED-PROPELLER	1		
83	14	31210	TAB WASHER, PROPELLER NUT	1		
84	11	52707A 1	PROPELLER NUT	1		
85		31640A 1	TRIM TAB, GEAR HOUSING (2-3/	1		
85		34127A 1	TRIM TAB, GEAR HOUSING (4")	OPT.		
86	10	32470	SCREW, TRIM TAB TO GEAR HO	1		
87	10	30206	SCREW, GEAR HOUSING TO DR	1		
88	11	34933	NUT, DRIVE SHAFT HOUSING TC	2		
-	43	96084A 2	GEAR REPLACEMENT KIT, COMF	1		