



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	79822A 2	STARTER MOTOR ASSEMBLY	1	SEE NOTE	
3	12	29245	WASHER, STARTER MOTOR STU	1		
4	11	29031	NUT, STARTER MOTOR STUD	1		
5		35363	BRACE, STARTER MOTOR	1		
6	10	35765	SCREW, BRACE TO ENGINE (5/8	1		
7	10	94435	SCRE, STARTER MOTOR TO CYL	1		
7	10	34544	SCRE, STARTER MOTOR TO CYL	1		
9	11	32219	NUT, STARTER TERMINAL-NON	OPT.		
9	11	40020 4	NUT, STARTER TERMINAL-MET	OPT.		
10	13	26995	LOCKWASHER, STARTER TERM	2		
11	11	26419	NUT, STARTER TERMINAL (#8)	2		
12		34625	WATER TEMERTURE SENDER A	1		
13	13	26996	LOCKWASHER, WATER TEM	1		
14	11	68219	NUT, WATER TEMPERTURE	1		
15		90806	OIL PRESSURE SENDER ASSEM	1		
16	13	26996	LOCKWASHER, OIL PRESSUF	1		
17	11	68219	NUT, OIL PRESSURE SENDE	1		
18	22	46932	ELBOW, OIL PRESSURE SENDE	1		
19	22	73676	NIPPLE, OIL PRESSURE SENDE	1		
20		78403A 1	ALTERNATOR ASSEMBLY (MOTC	1		
22	11	30968	NUT, GROUND TERMINAL	1		
23	13	26996	LOCKWASHER, GROUND TERMI	1		
24	11	20890	NUT, HARNESS TO BATTERY TE	1		
25	13	26992	LOCKWASHER, HARNESS TO BA	1		
25A	12	96457	WASHER, BOOT ATTACHING (PF	1		
26		85013	BRACE, ALTERNATOR ADJUSTIF	1		
27	10	29198	SCREW, BRACE TO ALTERNATO	1		
27	10	73657	SCREW, BRACE TO ALTERNATO	1		
27A	23	36534	SPACER, BRACE SCREW WITH F	1		
28	12	26168	WASHER, BRACE SCREW	1		
29	10	27165	SCREW, ALTERNATOR BRACE T	1		
30	13	35048	LOCKWASHER, ALTERNATOR BI	1		
31	12	20553	WASHER, ALTERNATOR BRACE	1		
32		48104	BRACKET, ALTERNATOR MOUN	1		
33	10	76926	SCREW, ALTERNATOR BRACKE	3		
34	13	35048	LOCKWASHER, ALTERNATOR BI	3		
35	10	48308	SCREW, ALTERNATOR TO ALTE	1		
36	23	33186	BUSHING, ALTERNATOR TO BR	1		
37	12	20553	WASHER, ALTERNATOR BRACK	2		
38	11	2161	NUT, ALTERNATOR BRACKET SI	1		
39	95	78695	INSULATOR, BOOT STARTER CA	1		